

User's Manual for ASAMV PLUS High Voltage Solid Soft Starter



V1.3

- **Please read through the instruction manual so as to properly carry out installation, circuit connection, operation and maintenance.**
- **Specification of this product is subject to change without prior notice.**
- **This instruction manual should be properly kept until the product is out of service.**
- **This instruction manual should be kept by real users.**

Contents

Section 1 General Introduction	4
Description of model	5
Technical indicators	5
Diagram of major loop	7
Design structure	7
General structure	7
Operating Principles	8
Technical characteristics	9
Section 2 Operating Instructions	10
Panel introduction	10
Operating principle and process	12
Section 3 Installation	15
Specifications and dimension	15
Acceptance and unpacking	16
Installation	16
Additional reconstruction of the equipment	18
Section 4 Operation of LCD Display	19
Operation of LCD Display	19
Functional description of keys	19
Operation flow for altering parameter items	19
Section 5 Start	21
Procedures for low voltage test	21
Procedures for high voltage test	22
Control mode of soft start	22
Parameters and Description	25
Control parameter list of soft starter	25
Section 6 Maintenance and Troubleshooting	33
Fault analysis	33
Fault code	33
Fault history	34
Troubleshooting	34

Maintenance	35
Section 7 Communication description	35
Contains of the protocol	36
Structure of bus	36
Description of protocol	36
Frame structure	36
State control word	37
Address for communication	37
Notice	40
Section 8 Additional Information	42
Order information	42
Schematic diagram of wiring	43

Attentions on safety

To ensure proper use of this device, you must be read through the operating instructions before installation, wiring, operation and maintenance. In the course of operating, you must get familiar with mechanical drive conditions and others relating to safety.



Safety

- Please read these instructions carefully before using this soft starter and operate the device strictly in accordance with operating instructions;
- Installation and maintenance must be done strictly in accordance with these introductions and standards of the relative countries; we shall assume no responsibility, either directly or indirectly, for any action or consequences of any actions associated with the use of our products;
- Power must be cut off before maintenance is done to soft starter or motor;

Please carefully check if any spare part is left inside soft starter after assembly.



Warning

- After this soft starter is connected to power supply, the voltage of certain elements inside the soft starter is equal to that of power supply. It will be dangerous to touch them with hand and may cause serious hurt to your body;
- ASAMV PLUS's load end is not allowed to be connected with capacitor power-factor compensator and piezoresistor for fear of causing impact current, which may damage SCR in starting. Do not attempt to repair damaged elements and contact your supplier please; and
- When soft starter is used together with frequency converter, their output terminals should be isolated with each other.


Section 1 General Introduction

ASAMV PLUS series high voltage solid soft starter (hereinafter referred to as soft starter) is a high voltage motor soft

starter designed with up-to-date concept, and mainly applicable to the control and protection for the starting and stopping of squirrel-cage type asynchronous and synchronous motors. The starter is composed of several thyristors in series-parallel, and it can meet different current and voltage requirements.

The product is widely used in electric industry with rated voltage 3000 to 10000V, building materials, chemical industry, metallurgy, steel and paper-making industries etc., and can perform well if used together with various kinds of electromechanical devices including water pumps, fans, compressors, crushers, agitators and conveyer belt etc.. It is the ideal device for starting and protecting high voltage motors.

1.1 Description of model

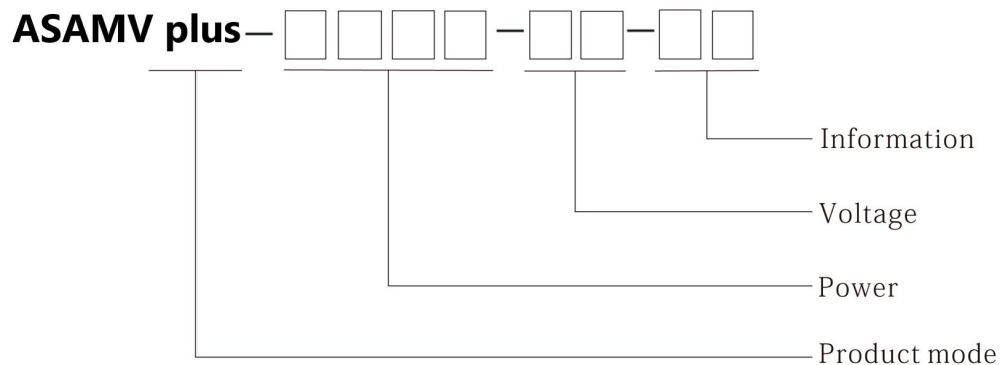


1.2 Technical indicators

Basic parameters	
Type of load	Three-phase squirrel cage asynchronous and synchronous motors
AC voltage	3000---10000VAC
Service frequency	50HZ/60HZ±2HZ
Phase sequence	ASAMV PLUS is allowed to work with any phase sequence (through setting parameter)
Composition of major loop	(12SCRS、18SCRS、30SCRS depend on model)
Bypass contactor	Contactor with direct starting capacity
Control power	AC220V±15%
Transient voltage overload protection	dv/dt snubber network
Start frequency	1-3 times per hour
Ambient condition	Ambient temperature: -20℃ -+50℃
	Relative humidity: 5%---95% no condensation
	Altitude less than 1500m (derating when altitude is more than 1500m)
Protective functions	
Open-phase protection	Cut off any phase of primary power supply in the course of starting or operation.
Over-current protection in operation	Operational Over-current protection setting: 20~500%Ie
Unbalanced phase current protection	Unbalanced phase current protection: 0~100%
Overload protection	Overload protection grade: 10A、10、15、20、25、30、OFF

Underload protection	Underload protection grade: 0~99% Action time of underload protection: 0~250S
Start timeout	Start time limit: 0~120S
Over-voltage protection	When voltage of primary power supply is 120% higher than rated value, over-voltage protection is enabled.
Under-voltage protection	When voltage of primary power supply is 70% lower than rated value, under-voltage protection is enabled.
Phase protection	Allow to work with any phase sequence (through setting parameter)
Ground protection	Protection available when grounding current is higher than set value
Description of communication	
Protocol	Modbus RTU
Communication interface	RS485
Network connection	Each ASAMV PLUS can communicate with 31 ASAMV PLUS equipments in network.
Function	Operation state and programming can be observed through communication interface.
Operating interface	
LCD display	LCD display/touch screen display
Language	Chinese and English
Keyboard	6 touch membrane keyboard
Meter display	
Voltage of primary power supply	Display voltage of three-phase primary power supply
Three-phase current	Display current of three-phase major loop
Data record	
Fault history	Record recent 15 faults information
History of number of starts	Record number of starts of this soft starter

1.3 Diagram of major loop

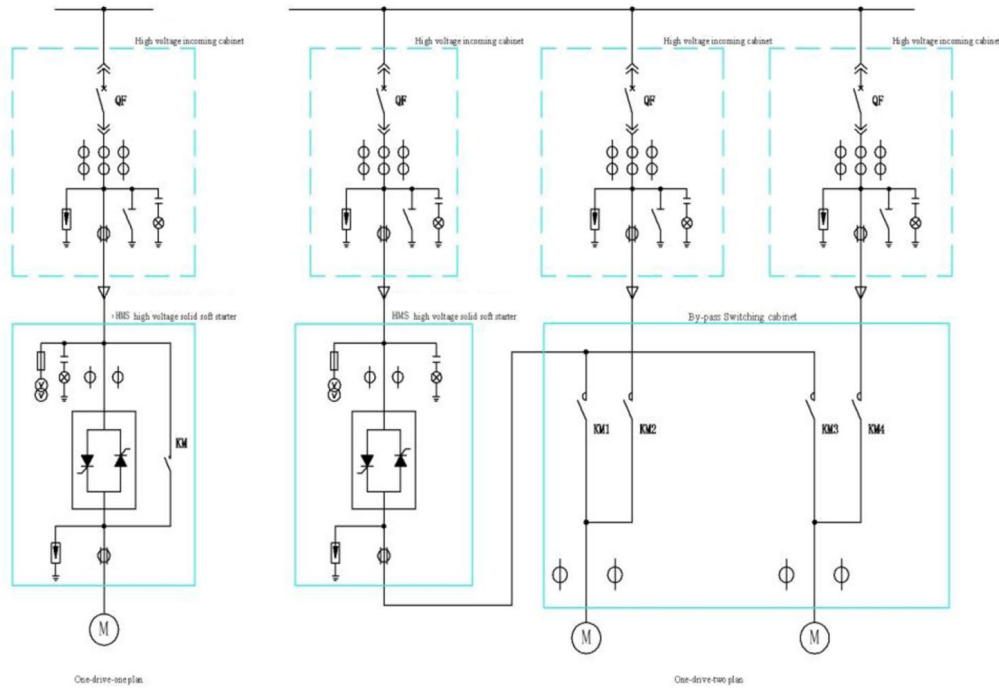

1.4 Design structure

Complete ASAMV PLUS series soft starter is a standard device for starting and protecting motors, and can be used to control and protect high voltage AC motors. Standard ASAMV PLUS product is composed of the following parts: high voltage thyristor module, thyristor-protecting parts, optical fiber triggering parts, vacuum switch parts, signal acquiring and protecting parts, system controlling and displaying parts.

- ◆ **Thyristor module:** The thyristors of the same parameters are assembled in series-parallel in each phase. The number of the selected thyristors to be assembled in series is different, which depends on the peak voltage requirements of the grid used.
- ◆ **Thyristor-protecting parts:** mainly include over-voltage snubber network composed of RC network and the voltage balance protecting network composed of voltage balancing units.
- ◆ **Optical fiber triggering parts:** The consistency and reliability of triggering are ensured by strong triggering pulse circuit; optical fiber triggering is used for reliable separation of high voltage and low voltage.
- ◆ **Vacuum switch parts:** After the starting is completed, three-phase vacuum bypass contactor closes automatically, and the motor is put into grid for operation.
- ◆ **Signal acquiring and protecting parts:** The acquisition of the voltage and current signals in the major loop, control of main CPU and corresponding protection are realized by voltage transformer, current transformer, arrester and zero sequence current transformer.
- ◆ **System controlling and displaying parts:** 32-bit ARM-core microcontroller performs the central control. LCD/touch screen display can display three-phase voltage, current, fault information and running state etc.

1.5 General structure

The general structure of the ASAMV PLUS series incorporates careful consideration with the purpose of meeting the requirements of various application objects and working environments.

- ◆ **Structure:** The structure meets the common technical requirements of GB11022-1999-T high voltage switchgear and control equipment. Sealing treatment is adopted in the cabinet to reduce the pollution to the inside of the machine, with reasonable layout. The advanced digital triggering system connects the LV control to the high

voltage part through optical fiber, and the convenient maintenance design allows the modules of different phases to be replaced rapidly and separately. To ensure the running safety, high voltage part shall be separated from the LV part completely.

◆ **Parts:** The general structure of ASAMV PLUS is divided into three parts with mutual isolation, including the high voltage loop composed of high voltage thyristor module, thyristor-protecting parts, vacuum switch parts etc.; the thyristor triggering and signal acquiring and system protecting unit composed of optical fiber triggering parts, signal acquiring and protecting parts; and the system controlling and human-computer interacting unit composed of system controlling and displaying parts. The three units shall be isolated from each other, and the reliable isolation of high voltage from LV shall be achieved.

The power cables can enter the cabinet from the top or the bottom. There shall be enough space in the cabinet to facilitate the connection of the incoming line of power supply. The cable of the motor can be bent in a proper way when entering the cabinet from the bottom.

◆ **Earth wire:** To ensure the reliable running of ASAMV PLUS, the earth wires of the control units in the cabinet shall be connected to the earthing copper bar at the lower part of the cabinet.

◆ **Transportation provisions:** The openings and the bent corners on the cabinet can bear and support the max weight of the whole cabinet structure.

1.6 Operating Principles

The control core of ASAMV PLUS series is a microprocessor CPU. The microprocessor controls the phase-angle triggering of SCR to reduce the voltage on motor, and then control the voltage and current on the motor slowly and increase the motor torque smoothly, until the motor steps up to full-speed running. Such starting method can reduce the impulse current during the starting of motor and the impact on grid and the motor itself, and also reduce the mechanical impact on the mechanical loading devices attached to the motor, so as to prolong the service life of the equipment and reduce faults and stop detection time.

In the state of full-speed running, has a bypass output the current of the motor falls to the current value at normal full-speed running. ASAMV PLUS series soft starter relay, which can make the bypass high voltage vacuum contact closed and make the current of the motor pass through the contactor, so as to prevent the heat loss arising from the voltage drop caused by the on-state of SCR, and improve the operating efficiency and reliability, as shown in Figure (1).

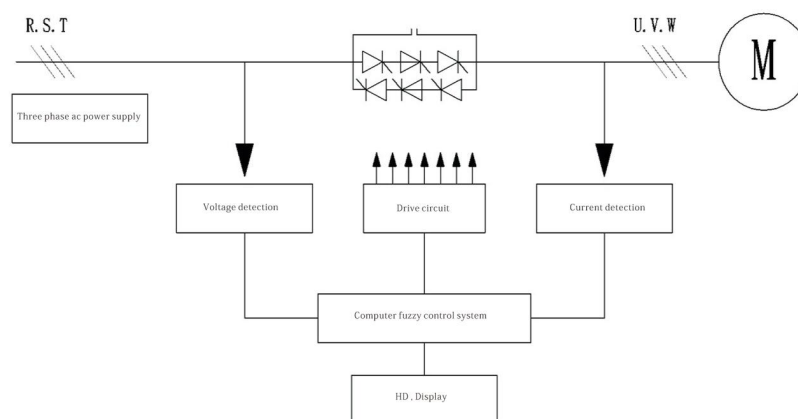


Figure (1)


1.7 Technical characteristics

- ◆ **Free of maintenance:** Thyristor is an electric device without contacts. Different from other kinds of products that need frequent maintenance on liquid and parts etc., it turns the mechanical lift into the service life of electronic components, so it needs no maintenance after running for many years.
- ◆ **Easy installation and operation:** ASAMV PLUS is a complete system for controlling and protecting the starting of motor. It can put into operation only with the power line and motor line connected. The whole system can be tested electrically under low voltage before operating with high voltage.
- ◆ **Backup:** The starter comes equipped with a vacuum contactor which can be used to start the motor directly in the inside. If ASAMV PLUS fails, the vacuum contactor can be used to start the motor directly to ensure the continuity of the production.
- ◆ High voltage thyristor is a component of major loop, equipped with voltage balancing protection system and over-voltage protection system.
- ◆ ASAMV PLUS comes equipped with an electromagnetic blocking device for fear of entering the high voltage device in the electrified state.
- ◆ Advanced optical fiber transmission technique realizes the triggering detection of high voltage thyristor and the isolation between LV control loops.
- ◆ 32-bit ARM-core microcontroller is used to perform central control which is real-time and high efficient with , high reliability and excellent stability.
- ◆ LCD/touch screen display system in both Chinese and English with human-friendly operation interface.
- ◆ RS-485 communication port can be used to communicate with the upper computer or centralized control center.
- ◆ Aging experiments are made on all circuit boards.


Section 2 Operating Instructions


2.1 Panel introduction

The device panel is composed of following elements:

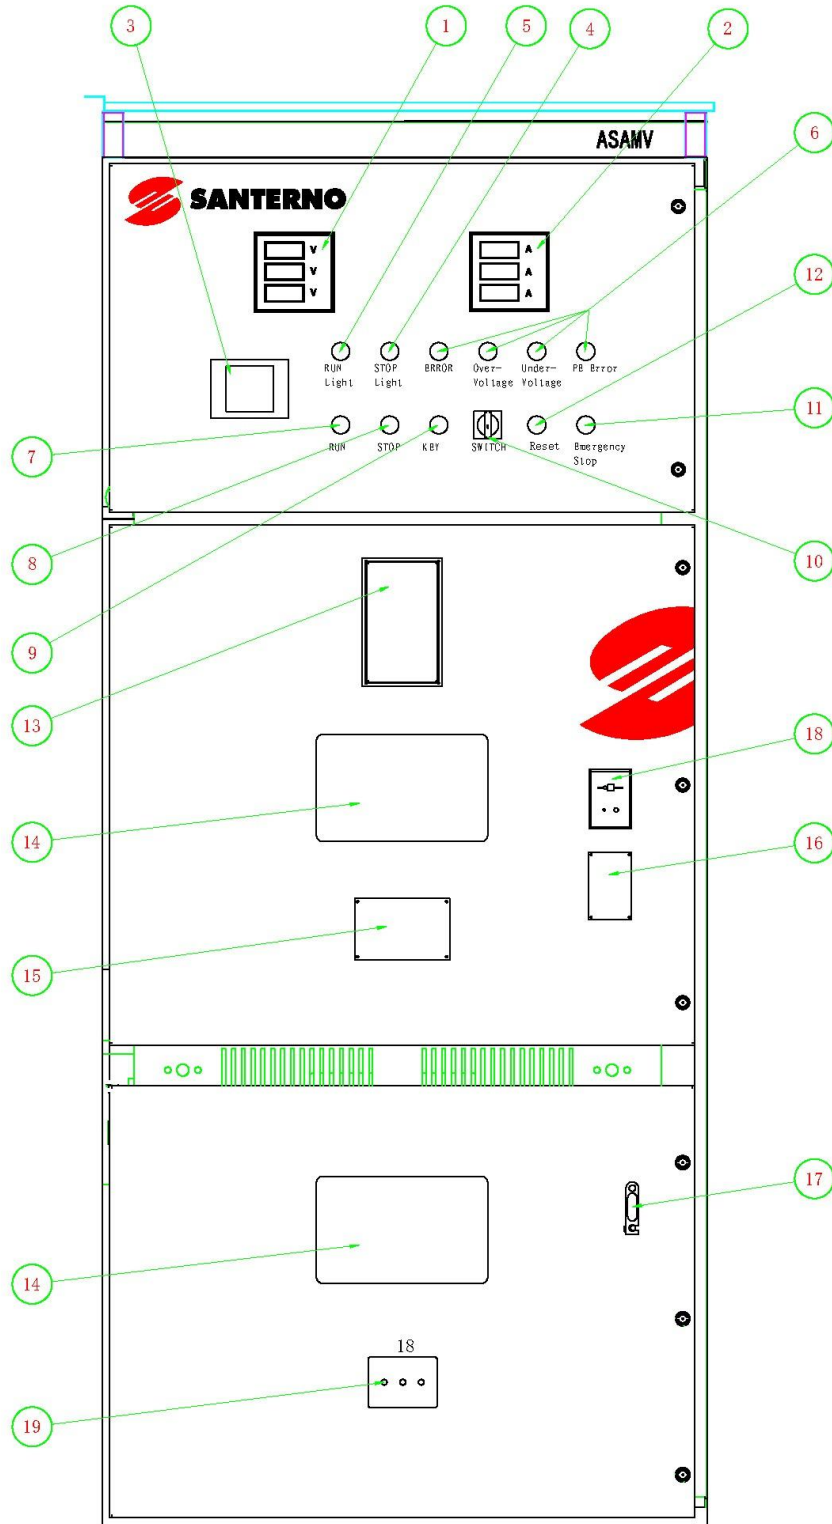

Item	Mark	Name	Type	Qty	Remark
1	PV	Digital display voltmeter	SXB-252-3U	1	
2	PA	Digital display ammeter	SXB-252-3I	1	
3	CMV	Keyboard case	Shell_CMV	1	
4	HG	Indicator light	XB2 BVMD	1	Green
5	HR	Indicator light	XB2 BVMD	1	Red
6	HY1~4	Indicator light	XB2 BVMD	4	Yellow
7	SB1	Button	XB2BA31C	1	Green
8	SB2	Button	XB2BA42C	1	Red
9	SA2	Key switch	XB2BG53C	1	
10	SA1	Cam switch	K1F013QLHC	1	
11	SBJ	emergency button	XB2BS542C	1	
12	SB3	Button	XB2BA61C	1	Blue
13		Analog line card		1	
14		Observation window		2	
15		Nameplate		1	
16		Precautions		1	
17		Emergency unlock		1	
18	DS1	Electromagnetic lock	DSN1-AM	3	
19	DXN	Charged display	DXN-Q	1	


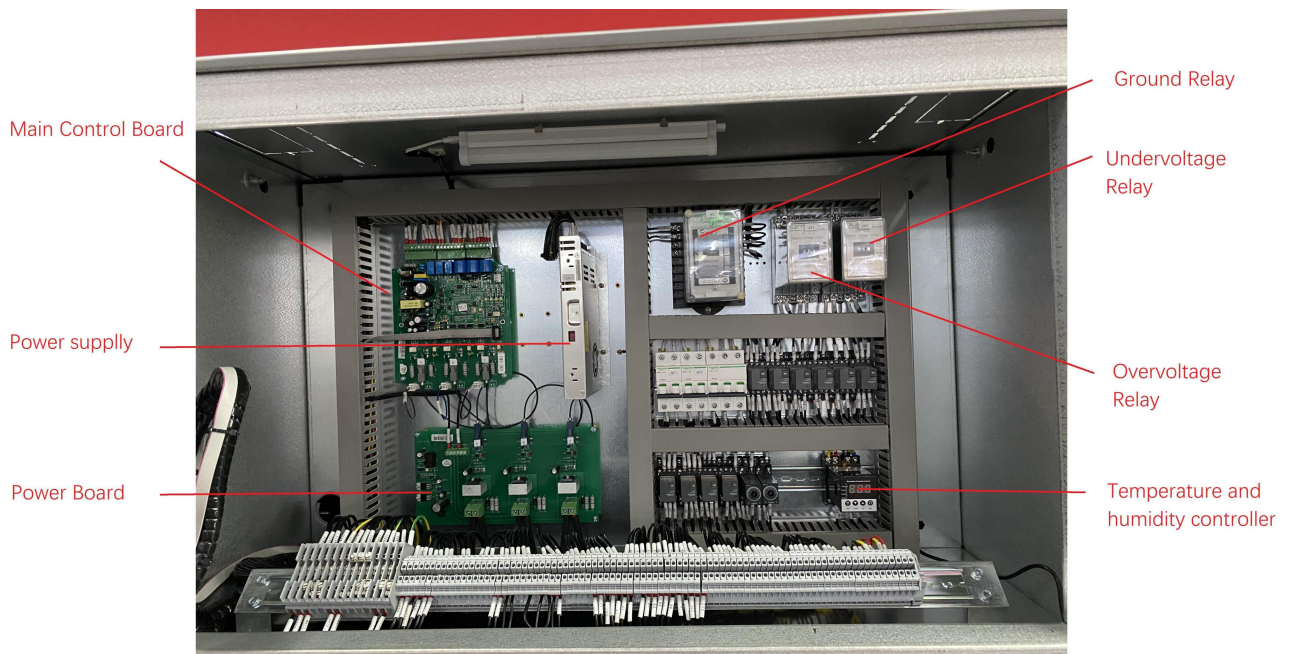


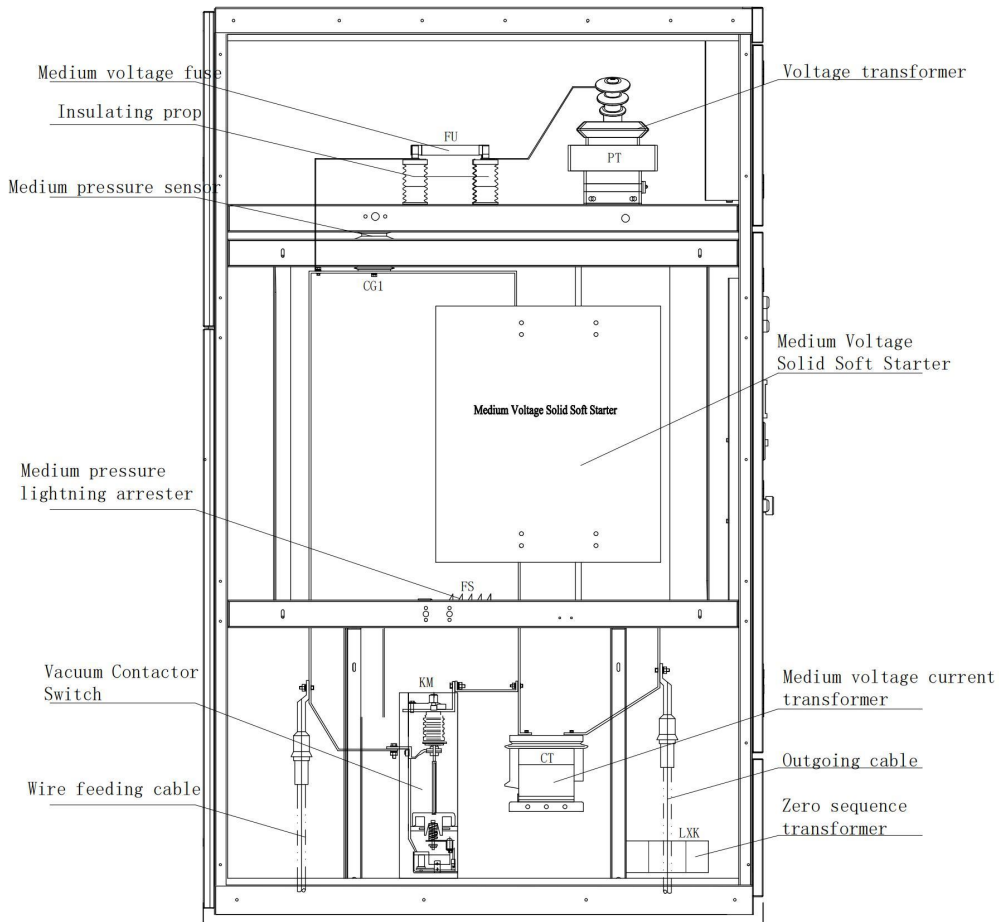

2.2 Operating principle and process

2.2.1 Wiring and check

- (1) Please ensure that all switches are in off state before wiring.
- (2) Install the soft start cabinet according to relevant standards of medium and high voltage cabinet.
- (3) Major loop connection: Terminal R-S-T connects to power source.
Terminal U-V-W connects to motor.
- (4) Control terminal connection: the power AC220V/50Hz provided by clients connects to the corresponding position of client terminal in low voltage chamber.

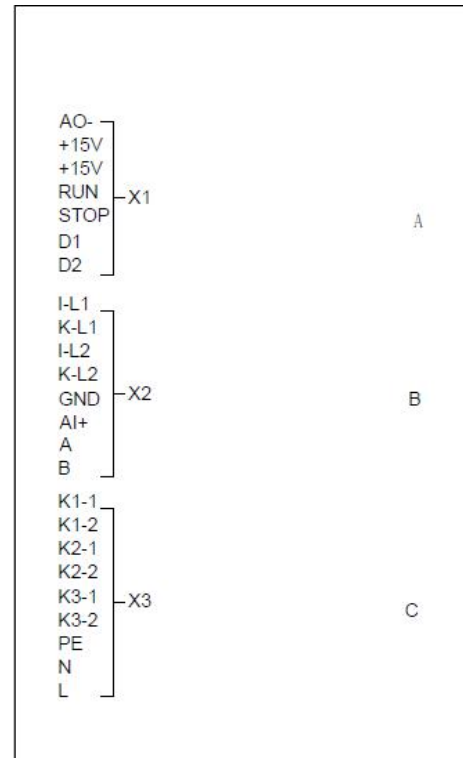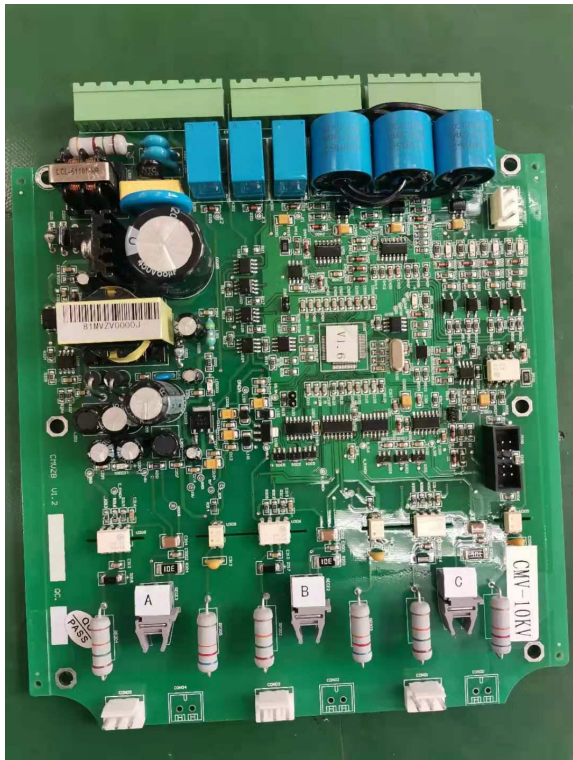

- (5) Earthing: Connect the grounding cable to GND of the cabinet.

Check whether the major loop voltage and control loop voltage match the voltage of the soft starter.

The soft starter reserves part of signals on external wiring terminal and users may conduct wiring as needed.

2.2.2 Power on and operation

- (1) When the micro circuit breaker of AC220V control power is placed at closed position, the LCD man-machine interface on the panel of the soft starter indicates “STOP”, stop indicator (green) is lighted up and digital display voltage/current meters are lighted up respectively.
- (2) When the upper primary power switch is placed at closed position, the LED of live display on the panel of the soft starter is lighted up indicating that three-phase power supply is switched on and digital display voltage meter displays the voltage of three-phase power supply.
- (3) In standby, Browse internal set parameters of the soft starter to ensure that parameter setting matches the actual load.
- (4) Please ensure that operating work is done when the current three-phase power supply is normal.

2.2.3

(1) This device has three control modes including local, remote and DCS control. Users can change the control mode via the switcher on the panel (forbidden to change the control mode during the operation of the device).

(2) The startup control of this device has soft start and direct start.

Soft start mode: Turn the switcher to the position of “soft start” and press the startup button (green) to start the motor. Users can observe the starting course of the motor and the current via digital three-phase ampere meter mounted on the device. After the startup of the motor, it automatically switches to bypass state and the operation indication indicating lamp on the device is lightened up (red).

Press the red stop button on the panel in the process of startup and operation, the motor will stop and indicator lamp on panel will be lightened up (green).

When a fault is detected in the soft starter, the fault indicator lamp (yellow) on the panel will be lighted up and the motor will stop automatically.

The next operation shall not be allowed until fault is removed (users can remove the fault display on the panel by cutting off the external AC220V power supply)

Direct start mode: Turn the switcher to the position of “direct start”, press the startup button (green) and the vacuum contactor sucks up. Users can observe the starting course of the motor and the current via digital three-phase ampere meter mounted on the device. The motor operates directly through the vacuum contactor and the operation indicating lamp on the device is lightened up (red).

Press the red stop button on the panel in the process of startup and operation, the motor will stop and indicator lamp on panel will be lightened up (green).

When a fault is detected in the soft starter, the fault indicator lamp (yellow) on the panel will be lighted up and the motor will stop automatically.

The next operation shall not be allowed until fault is removed (users can remove the fault display on the panel by cutting off the external AC220V power supply)

In case of emergency occurs in the process of starting and operation, please press the emergency button on the panel of the soft starter for emergency stop.

The device is defaulted as local control, soft starting mode and the interlocking signal of switch cabinet is at closed position when it is delivered.

If the high voltage solid soft starter is one for multiple, please operate the device according to the method mentioned above. The second motor should be started with the interval greater than 10 minutes after the first motor starts.

Section 3 Installation

3.1 Specification and dimension

Voltage grade	Model	Rated current (A)	kW	Dimension W*D*H
3000 V	ASAMV plus-280-3	67	280	1000*1500*2300mm
	ASAMV plus-315-3	76	315	
	ASAMV plus-355-3	85	355	
	ASAMV plus-420-3	101	420	
	ASAMV plus-450-3	108	450	
	ASAMV plus-520-3	125	520	
	ASAMV plus-560-3	135	560	
	ASAMV plus-630-3	152	630	
	ASAMV plus-710-3	171	710	
	ASAMV plus-800-3	192	800	
	ASAMV plus-1000-3	241	1000	
	ASAMV plus-1250-3	301	1250	1300*1660*2300mm
	ASAMV plus-1400-3	337	1400	
	ASAMV plus-1600-3	385	1600	
	ASAMV plus-1800-3	433	1800	
	ASAMV plus-2000-3	481	2000	
	ASAMV plus-2250-3	541	2250	
3300 V	ASAMV plus-280-3.3	61	280	1000*1500*2300mm
	ASAMV plus-315-3.3	69	315	
	ASAMV plus-355-3.3	78	355	
	ASAMV plus-420-3.3	92	420	
	ASAMV plus-450-3.3	98	450	
	ASAMV plus-520-3.3	114	520	
	ASAMV plus-560-3.3	122	560	
	ASAMV plus-630-3.3	138	630	
	ASAMV plus-710-3.3	155	710	
	ASAMV plus-800-3.3	175	800	
	ASAMV plus-1000-3.3	219	1000	
	ASAMV plus-1250-3.3	273	1250	
	ASAMV plus-1400-3.3	306	1400	
	ASAMV plus-1600-3.3	350	1600	1300*1660*2300mm
	ASAMV plus-1800-3.3	394	1800	
	ASAMV plus-2000-3.3	437	2000	
	ASAMV plus-2250-3.3	492	2250	
	ASAMV plus-2500-3.3	547	2500	
6000 V	ASAMV plus-280-6	34	280	1000*1500*2300mm
	ASAMV plus-315-6	38	315	

	ASAMV plus-355-6	43	355	
	ASAMV plus-420-6	51	420	
	ASAMV plus-450-6	54	450	
	ASAMV plus-520-6	63	520	
	ASAMV plus-560-6	67	560	
	ASAMV plus-630-6	76	630	
	ASAMV plus-710-6	85	710	
	ASAMV plus-800-6	96	800	
	ASAMV plus-1000-6	120	1000	
	ASAMV plus-1250-6	150	1250	
	ASAMV plus-1400-6	168	1400	
	ASAMV plus-1600-6	192	1600	
	ASAMV plus-1800-6	217	1800	
	ASAMV plus-2000-6	241	2000	
	ASAMV plus-2250-6	271	2250	
	ASAMV plus-2500-6	301	2500	
	ASAMV plus-2800-6	337	2800	
	ASAMV plus-3000-6	361	3000	1300*1660*2300mm
	ASAMV plus-3200-6	385	3200	
	ASAMV plus-3500-6	421	3500	
	ASAMV plus-3800-6	457	3800	
	ASAMV plus-4000-6	481	4000	
	ASAMV plus-4500-6	541	4500	
6600 V	ASAMV plus-280-6.6	31	280	1000*1500*2300mm
	ASAMV plus-315-6.6	34	315	
	ASAMV plus-355-6.6	39	355	
	ASAMV plus-420-6.6	46	420	
	ASAMV plus-450-6.6	49	450	
	ASAMV plus-520-6.6	57	520	
	ASAMV plus-560-6.6	61	560	
	ASAMV plus-630-6.6	69	630	
	ASAMV plus-710-6.6	78	710	
	ASAMV plus-800-6.6	87	800	
	ASAMV plus-1000-6.6	109	1000	
	ASAMV plus-1250-6.6	137	1250	
	ASAMV plus-1400-6.6	153	1400	
	ASAMV plus-1600-6.6	175	1600	
	ASAMV plus-1800-6.6	197	1800	
	ASAMV plus-2000-6.6	219	2000	
	ASAMV plus-2250-6.6	246	2250	
	ASAMV plus-2500-6.6	273	2500	
	ASAMV plus-2800-6.6	306	2800	

	ASAMV plus-3000-6.6	328	3000	1300*1660*2300mm
	ASAMV plus-3200-6.6	350	3200	
	ASAMV plus-3500-6.6	383	3500	
	ASAMV plus-3800-6.6	416	3800	
	ASAMV plus-4000-6.6	437	4000	
	ASAMV plus-4500-6.6	492	4500	
	ASAMV plus-5000-6.6	547	5000	
10000 V	ASAMV plus-280-10	20	280	1000*1500*2300mm
	ASAMV plus-315-10	23	315	
	ASAMV plus-355-10	26	355	
	ASAMV plus-420-10	30	420	
	ASAMV plus-450-10	32	450	
	ASAMV plus-520-10	38	520	
	ASAMV plus-560-10	40	560	
	ASAMV plus-630-10	45	630	
	ASAMV plus-710-10	51	710	
	ASAMV plus-800-10	58	800	
	ASAMV plus-1000-10	72	1000	
	ASAMV plus-1250-10	90	1250	
	ASAMV plus-1400-10	101	1400	
	ASAMV plus-1600-10	115	1600	
	ASAMV plus-1800-10	130	1800	
	ASAMV plus-2000-10	144	2000	
	ASAMV plus-2250-10	162	2250	
	ASAMV plus-2500-10	180	2500	
	ASAMV plus-2800-10	202	2800	
	ASAMV plus-3000-10	217	3000	
	ASAMV plus-3200-10	231	3200	
	ASAMV plus-3500-10	253	3500	
	ASAMV plus-3800-10	274	3800	
	ASAMV plus-4000-10	289	4000	
	ASAMV plus-4500-10	325	4500	
	ASAMV plus-5000-10	361	5000	1300*1660*2300mm
	ASAMV plus-5500-10	397	5500	
	ASAMV plus-6000-10	433	6000	
	ASAMV plus-6500-10	469	6500	
	ASAMV plus-7000-10	505	7000	
	ASAMV plus-7500-10	541	7500	
11000 V	ASAMV plus-280-11	18	280	1000*1500*2300mm
	ASAMV plus-315-11	21	315	
	ASAMV plus-355-11	23	355	
	ASAMV plus-420-11	28	420	

	ASAMV plus-450-11	30	450	
	ASAMV plus-520-11	34	520	
	ASAMV plus-560-11	37	560	
	ASAMV plus-630-11	41	630	
	ASAMV plus-710-11	47	710	
	ASAMV plus-800-11	52	800	
	ASAMV plus-1000-11	66	1000	
	ASAMV plus-1250-11	82	1250	
	ASAMV plus-1400-11	92	1400	
	ASAMV plus-1600-11	105	1600	
	ASAMV plus-1800-11	118	1800	
	ASAMV plus-2000-11	131	2000	
	ASAMV plus-2250-11	148	2250	
	ASAMV plus-2500-11	164	2500	
	ASAMV plus-2800-11	184	2800	
	ASAMV plus-3000-11	197	3000	
	ASAMV plus-3200-11	210	3200	
	ASAMV plus-3500-11	230	3500	
	ASAMV plus-3800-11	249	3800	
	ASAMV plus-4000-11	262	4000	
	ASAMV plus-4500-11	295	4500	
	ASAMV plus-5000-11	328	5000	1300*1660*2300mm
	ASAMV plus-5500-11	361	5500	
	ASAMV plus-6000-11	394	6000	
	ASAMV plus-6500-11	426	6500	
	ASAMV plus-7000-11	459	7000	
	ASAMV plus-7500-11	492	7500	
	ASAMV plus-8000-11	525	8000	

✧ The above models are typical product models. If the models you require are not included in the table, please

contact the manufacturer.

- ✧ Notice: The above dimensions are just for reference. If you need precise dimensions, please contact the manufacturer.
- ✧ Net-side contactor is optional. If you want net-side contactor, please specify it in the order.

3.2 Acceptance and unpacking

Tests of all the functions and running tests are made on every ASAMV PLUS soft starter before delivery. After receiving and unsealing the starter, please check according to the following steps. If problems are found, please contact the supplier immediately.

Confirm that the product models you receive are the same as that you ordered. Product model is shown on the nameplate.

Check whether the product is equipped with certificate of qualification, delivery inspection report, warranty card, product description and wiring diagram.

Observe whether the product is damaged during transport and handling.

Check whether the mechanical parts become loose and whether the line is broken during transport and handling. Loose wiring will increase the impedance and interfere with the functions of the product.


3.3 Installation

The soft starter must be installed vertically;


Never install the soft starter at the place of heat source;

Disconnect all the power supplies before installation;

The installation shall be in compliance with the local regulations and standards of electric apparatus as well as IEEE standard.

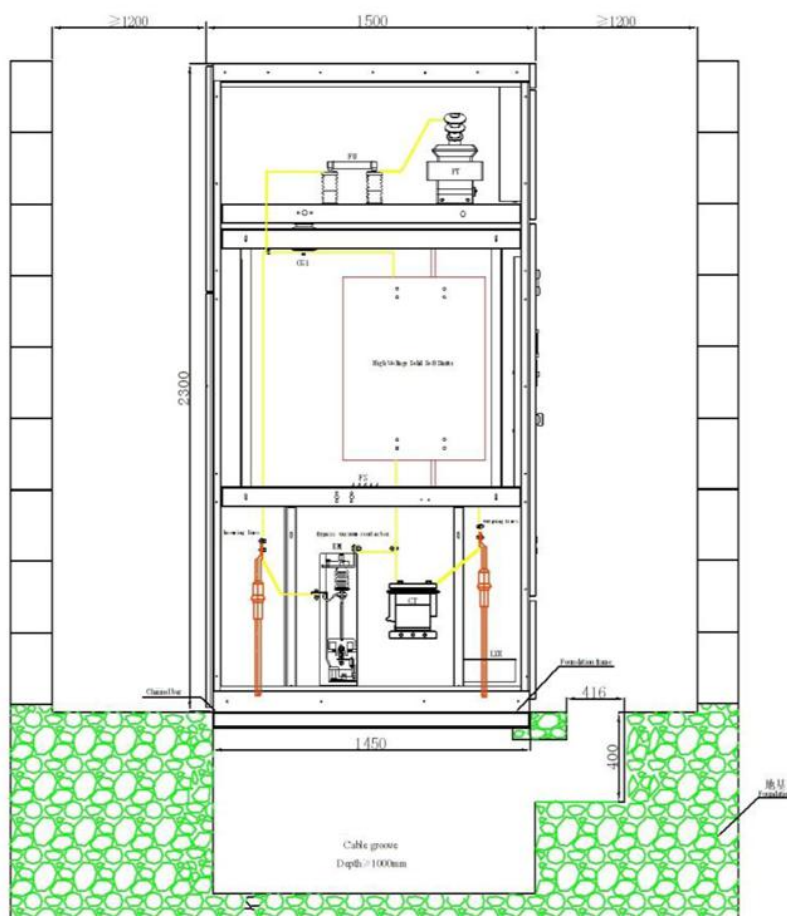

High voltage solid soft starter installation foundation

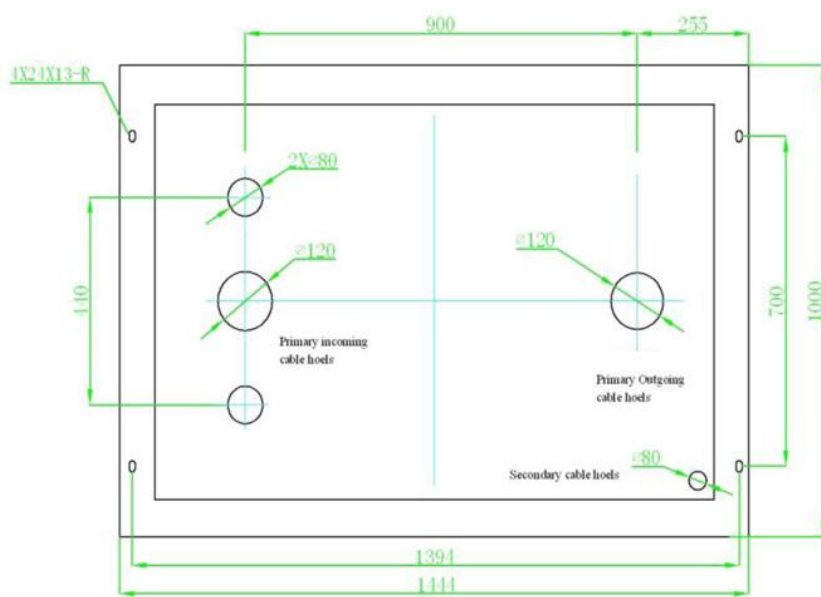

High voltage solid soft starter bottom view

3.4 Additional reconstruction of the equipment


If the connection of wires that come into the cabinet require additional holes due to improper positions, the electric parts in the cabinet shall be covered to prevent the metal filings from staying in the machine and resulting in serious accident of short circuit. Clean the inside of the cabinet carefully after drilling the hole, and check whether there are damages in the working area.

Section 4 Operation of LCD Display

4.1 Functional description of keys

Signs	Item	Functional Description
⊖	Enter Key	Enter the parameter menu, and confirm the data of parameter items to be altered
⬆	Increase Key	Increase parameter items or data
⬇	Decrease Key	Decrease parameter items or data
Ⓢ	ESC key	Confirm the altered parameter data and escape from the parameter items and parameter menu
Ⓜ	Run Key	The key can be used for running operation when effectively operated, and at this time the terminal 3 and 5 on the terminal block X1 are short-circuited.
Ⓢ	Stop Key	The key can be used for stopping operation when effectively operated. Pressing the stop key for four seconds at the state of fault can reset the current fault.

4.2 Operation flow for altering parameter items

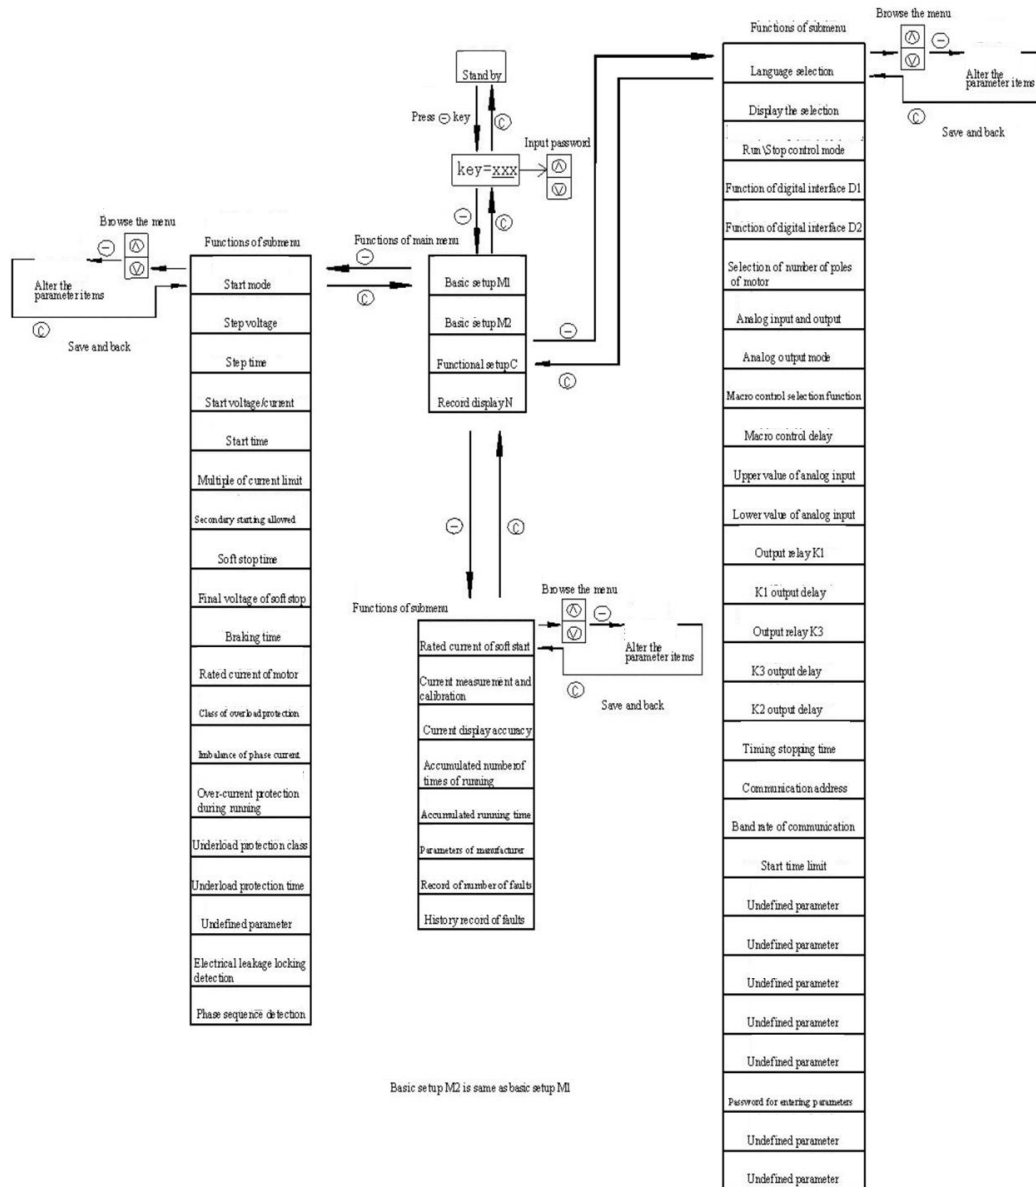

Section 5 Start

Warning: ASAMV PLUS has potential voltage that may cause injury to human body, so it must be operated by the authorized and trained personnel. It can be put into operation only with the power line and motor line connected. The whole system can be tested electrically under low voltage (AC380V) before operating with high voltage.



5.1 Procedures for low voltage test

Ensure that there is no any voltage on the electric parts.

Check whether all conductors are well connected.

Connect the input power supply (three-phase AC380V) to the input connecting terminals (R, S, T) of the soft starter.

Pull out the three-phase synchronous plug on the main control board, and plug in the low voltage synchronous test wire, with the other side of the test wire connected to the incoming line sides R, S and T in the major loop (during wiring, notice that R in the main loop shall correspond to Va on the main board, S to Vb and T to Vc).

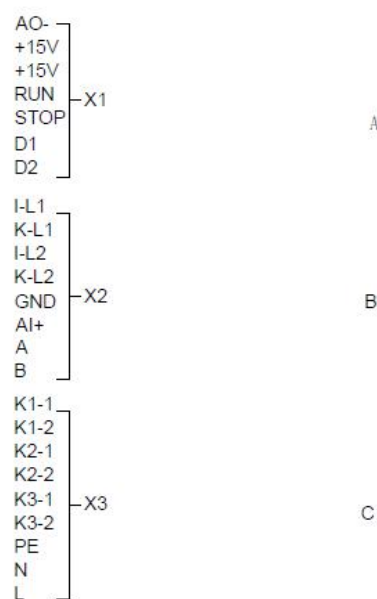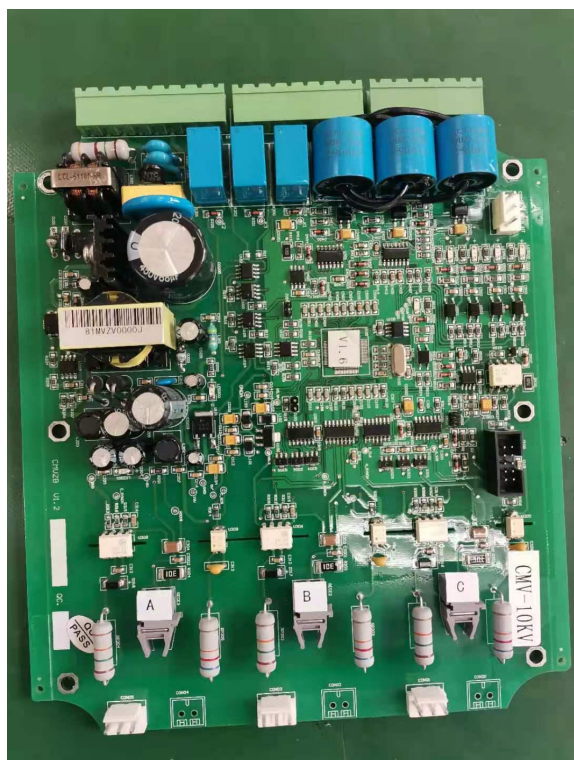

Connect AC220V power supply to the external control terminal L and N.

Connect LV test load to U, V, W ends of ASAMV PLUS soft starter.

Close the under-voltage protection function in the starter (refer to internal wiring diagram of the starter).

After ensuring that all wirings are correct, close the QF circuit breaker in the cabinet.

Close the door of the cabinet and get ready for low voltage test.

Connect with AC380V power supply, and observe whether the starting of the load is normal or not by operating the start and stop button on the panel of the starter.

Remove the wiring after test and prepare for high voltage test.

5.2 Procedures for high voltage test

Connect AC220V power supply to the external control terminal L and N1.

Connect the input high voltage power supply to the input connecting terminals (R, S, T) of the soft starter.

Connect the high voltage motor to the output connecting terminals (U, V, W) of the soft starter.

After ensuring that all wirings are correct, close the QF circuit breaker in the cabinet.


Close the door of the cabinet and be ready for high voltage test.

Check whether the setting current of the soft starter matches the actual rated current of the motor.

Check the starting control parameters of the motor, and refer to the detailed description in the programming part of Section 5 if the parameters need to be corrected.

Observe whether the starting of the load is normal or not by pressing the start and stop button on the panel of the starter.

5.3 Control mode of soft start

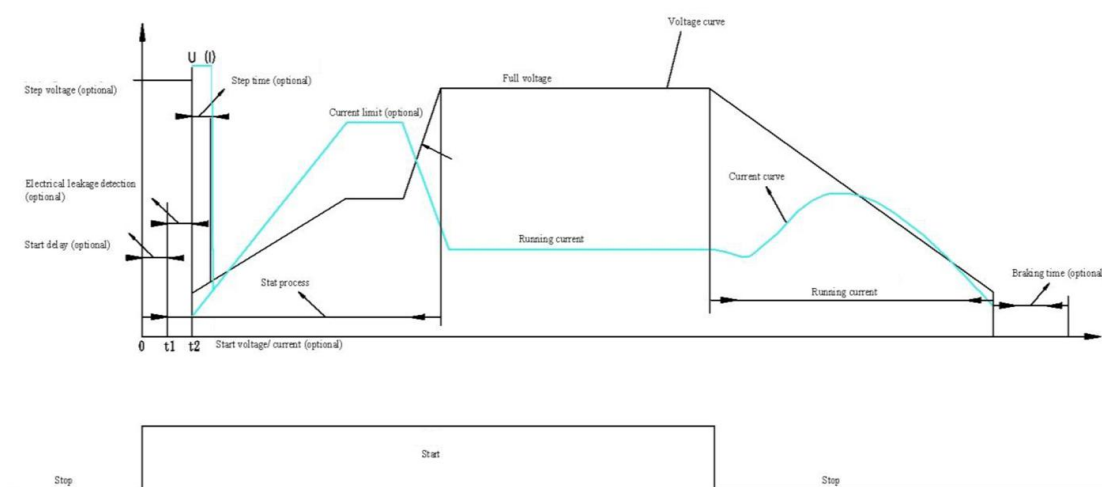


Characteristics Curve of Soft Start/Soft Stop Voltage (Current) Figure (2)

ASAMV PLUS series soft starters have many start modes: current-limiting soft start, voltage linear curve start, voltage exponential curve start, current linear curve start, current exponential start; and many stopping modes: free stop, soft stop, braking, soft stop + braking, and inching function. Users can choose different starting and stopping modes according to the load and specific service conditions.

5.3.1 Current limiting soft start

Under the mode of current limiting soft start, set the ramp time at zero. After the softer starter receives the starting order, its output voltage increases rapidly until the output current reaches the desired limited current amplitude value I_m , and

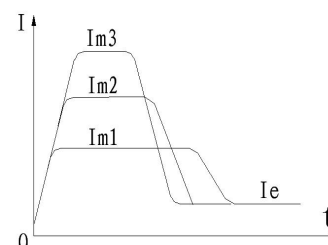


the output current does not become larger any longer; the current decreases after the motor runs and accelerates for a period of time, and the output voltage increases rapidly until the output with full voltage, and the starting process is completed.

Parameter	Description	Range	Set value	Value
1M04	Ramp time	0~120S	0	10
1M05	Current limit	100~500%I _e	—	350

Note: “---” means that customer can set according to specific application.

5.3.2 Exponential curve of voltage


Output voltage increases with the exponent characterizes at the desired ramp time, and at the same time, the output current increases at a certain rate. When the start current increases to the limited current amplitude value I_m , the current keeps constant until the starting is finished. In this mode, ramp time and multiple of current limit shall be set.

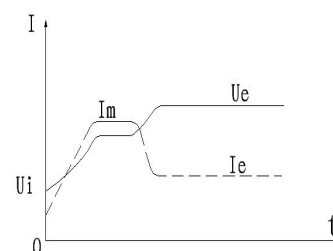

Parameter	Description	Range	Set value	Value
1M00	Ramp mode of start	0~3	0	0
1M03	Initial voltage	20~100%U _e	---	30%
1M04	Ramp time	0~120S	---	10
1M05	Current limit	100~500%I _e	---	350

5.3.3 Linear curve of voltage


Output voltage increases with the linear characterizes at the desired ramp time, and at the same time, the output current increases at a certain rate. When the start current increases to the limited current amplitude value I_m , the current keeps constant until the starting is finished.

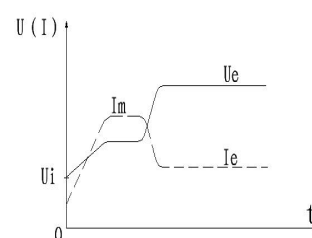

Parameter	Description	Range	Set value	Value
1M00	Ramp mode of start	0~3	1	0
1M03	Initial voltage	20~100%U _e	---	30%
1M04	Ramp time	0~120S	---	10
1M05	Current limit	100~500%I _e	---	350

5.3.4 Exponential curve of current


Output current increases with the exponent characterizes at the desired ramp time. When the start current increases to the limited current amplitude value I_m , the current keeps constant until the starting is finished. In this mode, ramp time and multiple of current limit shall be set.

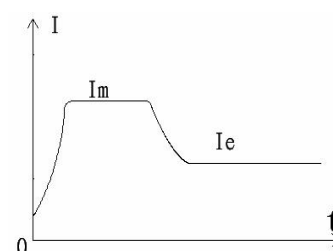

Parameter	Description	Range	Set value	Value
1M00	Ramp mode of start	0~3	2	0
1M03	Initial current	20~100%Ie	---	30%
1M04	Ramp time	0~120S	---	10
1M05	Current limit	100~500%Ie	---	350

5.3.5 Linear curve of current

Output voltage increases with the linear characterizes at the desired ramp time. When the start current increases to the limited current amplitude value I_m , the current keeps constant until the starting is finished.

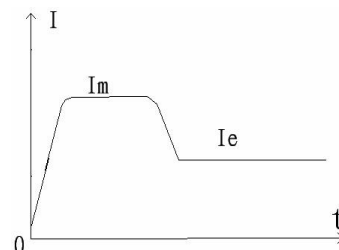

Parameter	Description	Range	Set value	Value
1M00	Ramp mode of start	0~3	3	0
1M03	Initial current	20~100%Ie	---	30%
1M04	Ramp time	0~120S	---	10
1M05	Current limit	100~500%Ie	---	350

5.3.6 Soft Start with step torque

The soft start mode with step torque is mainly applicable for the load motor with relatively big stiction. The static friction torque can be overcome by applying a relatively large transient starting torque. Under this mode, the output voltage reaches the step voltage fast, and falls to the start voltage after the time reaches the preset step time. Stable start is then realized in accordance with the preset start voltage/current and ramp time, until the starting is finished.

Parameter	Description	Range	Set value	Value
1M03	Initial voltage\current	(20~100%)Ue\ (20~100%)Ie	---	30
1M01	Voltage for kick start	20~100%Ue	---	20
1M02	Duration of kick start	0~2000mS	---	0



When using step torque start mode, it should be supported with other soft start modes and the step voltage and time are required.

5.3.7 Free stop

Free stop mode refers to the mode with soft stop time (1M07) and braking time (1M09) set at zero at the same time. After receiving the stop order, the soft starter firstly locks the control relay of the bypass contactor, and subsequently locks the output of the thyristor of the main circuit, and the motor stops freely, depending on the inertia of the load.

Parameter	Description	Range	Set value	Value
1M07	Ramp down time	0~120S	0	0
1M09	Braking time	0~250S	0	0

5.3.8 Soft stop

Soft stop refers to the stop under the state of full voltage when the soft stopping time is not set at zero. Under such mode, the soft starter will firstly cut off the bypass contactor, and the output voltage of the soft starter will decrease to the desired soft stop final voltage value gradually within the desired soft stopping time. After the soft stop is finished, the starter turns to braking state (braking time is not zero) or stops freely.

Parameter	Description	Range	Set value	Value
1M07	Ramp down time	0~120S	---	0
1M08	Final voltage of soft stop	20~60%Ue	---	20
1M09	Braking time	0~250S	0	0

5.3.9 Braking

When the braking time (function item 1M09) is preset and the braking time relay output is selected, after the soft starter stops freely, the output signal of the braking time relay will keep valid within the stop (braking) time. The output signals of the time relay are used to control the external braking units or electric control units with mechanical band-type braking.

Parameter	Description	Range	Set value	Value
1M07	Ramp down time	0~120S	0	0
1M09	Braking time	0~250S	---	0
C12	Output signal of relay K 1	0~8	4	3
C14	Output signal of relay K 3	0~8	4	7

5.3.10 Soft stop + braking

When the soft stopping time and braking time are set, the soft starter will firstly cut off the bypass contactor, and the output voltage of the soft starter will decrease to the desired soft stop final voltage value gradually within the desired soft stopping time. After the soft stop is finished, it will brake within the preset braking time.

Parameter	Description	Range	Set value	Value
1M07	Ramp down time	0~120S	---	0
1M08	Final voltage of soft stop	20~60%Ue	---	20
1M09	Braking time	0~250S	---	0
C12	Output signal of relay K 1	0~8	4	3
C14	Output signal of relay K 3	0~8	4	7

5.4 Parameters and Description

Customer may inquire or modify a parameter by scrolling through the main menu and four submenus which involve all parameters can be modified and settings that can be inquired. Customer can choose Chinese or English as displaying language according to different condition.

5.5 Control parameter list of soft starter

5.5.1 Start/stop control parameters

All parameters should be set when in state of stand by.

Parameter	Item	Range	Value
1M00	Ramp mode of start	0. Voltage ramp start exponent curve; 1. Voltage ramp start linear curve; 2. Current ramp start exponent curve; 3. Current ramp start linear curve;	0
1M01	Step voltage	20~100%Ue	20%
1M02	Step time	0~2000mS	0
1M03	Initial voltage/current	(20~100%)Ue\ (20~100%)Ie	30%
1M04	Ramp time	0~120S	10
1M05	Current limit	100~500%Ie	350
1M06	Secondary start allowed	0~60S	0
1M07	Soft stop time	0~120S	0
1M08	Final voltage of soft stop	20~60%Ue	20
1M09	Braking time	0~250S	0

5.5.2 Specifications of start/stop control parameters

◆ Start/stop control parameters) 1M01----1M09 (refer to section 5.3 for start control modes)

Users can select the start curve by parameter 1M00 to make the start curve fit in well with the practical load and achieve the optimal start effect. If the step voltage and step time are set, the starter will apply a relative large transient starting torque at the beginning of starting, and then perform the start according to the preset start voltage/current and ramp time. If secondary start time is set, in the case that the start is still unfinished after the time reaches the preset secondary ramp time, the secondary start will be carried out in accordance with the preset start voltage/start current and ramp time. In the process of starting, the start current is limited below the value set by means of the parameter 1M05. When 1M05 is set at 500%, the start current will not be limited in the process of starting.

Notice: When the voltage ramp start is selected as the starting mode, the parameter 1M03 represents start voltage; while when the current ramp start is selected as the starting mode, the parameter 1M03 represents start current. If the stop order is issued in the process of starting, the stop can only be free stop; if the stop order is issued after the starting is finished, the stop can be free stop, soft stop or braking.

The parameter 1M04 length of ramp time can decide when the starting torque can be increased to the final torque. If the ramp time is relatively long, a relatively small accelerating torque will be produced during the starting of the motor. In such way, long-time soft acceleration of motor can be realized. The length of ramp time shall be selected properly, so as to make the motor able to carry out soft acceleration until the rated speed is attained. In the case that the accelerating time finishes before the acceleration of the motor is finished, the torque will be limited to the preset torque limit within a certain period of time. Therefore, the ramp time here represents the rate at which the speed changes, and does not completely equal to the start time of the motor.


5.5.3 Protection parameters

Parameter	Item	Range	Value
1M10	Rated motor current	15.0~9999	----
1M11	Overload protection grade	10A、10、15、20、25、30、OFF	20
1M12	Unbalanced phase current protection	0~100%	70%
1M13	Over-current protection setting in operation	20~500%Ie	200%
1M14	Underload protection grade	0~99%	0
1M15	Action time of underload protection	0~250S	10
1M16	Load current time	0~10S	2
1M17	Not identified	--	--
1M18	Phase sequence detection	0. Disable 1. Enable	0

5.5.4 Specifications of protection parameters

◆ Protection parameters 1M10---1M18

Users can set 1M10, the rated current of motor, according to the power of the motor, so as to make the soft starter fit in well with the motor and protect the motor perfectly. The soft starter will carry out the over-current protection when the current exceeds the over-current protection value set by means of the parameter 1M13 And over flow 1M16 time duration. in the process of running. If the electronic heat overload class and tripping time set by means of the parameter 1M11 are exceeded, the soft starter will carry out overload protection. The soft starter can also perform underload protection according to the parameter 1M14 and 1M15. In addition, the soft starter can inspect three-phase current at all times, and perform phase current imbalance protection when the three-phase current exceeds the imbalance degree set by means of 1M12. And over flow C27 time duration. It will display the type of the fault in the interface while providing protection, which can facilitate the search of users. If the phase sequence of the power supply is not required during operation, the parameter 1M18 shall be set at 0; otherwise, the parameter 1M18 shall be set at 1.

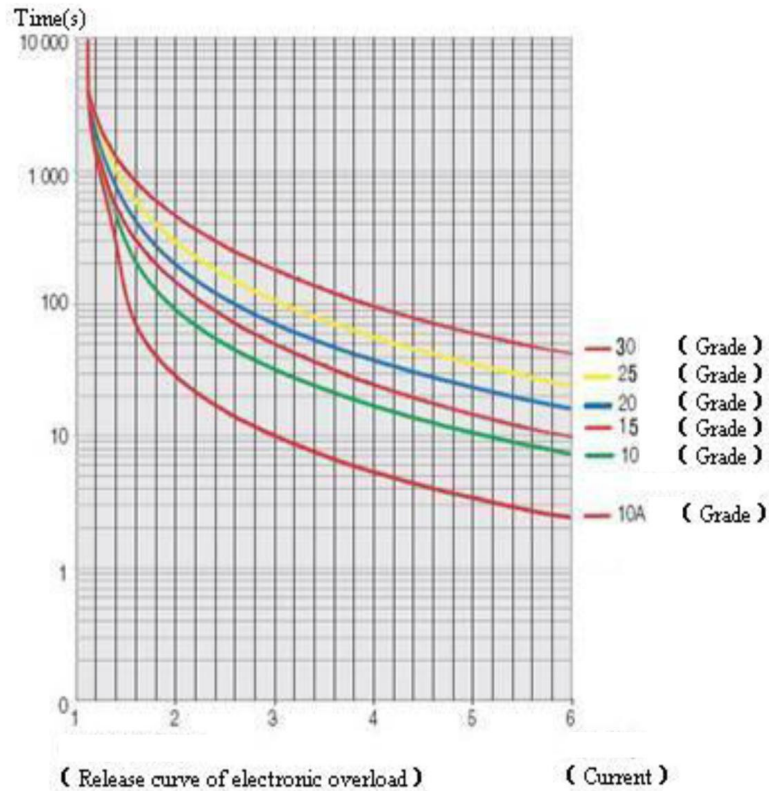

5.5.5 Senior Parameters

Parameter	Item	Range			
C00	Language	0-Chinese	1-English		0
C01	Display options	0-rate current of motor 3-L2 current 6-output voltage (%)	1-average current 4-L3 current 7-start countdown	2-L1 current 5-analogue input (%) 8-brake countdown	1
C02	Control mode of run/stop	0-panel run disabled /485 collective control disabled 1-panel run enabled /485 collective control disabled 2-panel run disabled /485collective control enabled 3-panel run enabled /485collective control enabled 4-panel jog enabled /485collective control disabled 5-panel jog enabled /485collective control enabled 6-panel jog disabled /485collective control enabled 7-panel jog disabled /485collective control disabled			1
C03	Signal of digital input terminal D1	0-M2 parameter 3-Closed contact macro control 5-emergency input	1-fault reset 4- Break contact macro control, 6-time delay relay input	2-jog	6
C04	Signal of digital input terminal D2	0-M2 parameter 3-Closed contact macro control 5-emergency input	1-fault reset 4- Break contact macro control 6- Not identified	2-jog	6

C05	Not identified	-----	--
C06	Analogue input and output	0-0~20mA analogue input and output (input logic plus) 1-4~20mA analogue input and output (input logic plus) 2-0~20mA analogue input,4~20mA analogue output (input logic plus) 3-4~20mA analogue input,0~20mA analogue output (input logic plus) 4-0~20mA analogue input and output (input logic minus) 5-4~20mA analogue input and output (input logic minus) 6-0~20mA analogue input,4~20mA analogue output (input logic minus) 7-4~20mA analogue input,0~20mA analogue output (input logic minus)	1
C07	Type of analogue output	0-average current 1 (0-200Ie)% 1-average current 2 (0-400Ie)%	0
C08	Function of macro control	0- macro control disabled 1-RUN macro control delay 2-digital input 1 COM connected macro control 3-digital input 2 COM connected macro control 4-analogue input macro control	0
C09	Macro control delay	0~250S	0
C10	Top limit of analogue input	0~100%	80
C11	Lower limit of analogue input	0~100%	20
C12	output signal of relay K1	0-full voltage 1-motor starting 2-soft stopping 3-fault 4-braking, 5-motor running 6-programmable time delay 7- Not identified 8-under load protection(does not trip as a fault)	3
C13	K1 output delay	0~250s	0
C14	output signal of relay K3	0-full voltage 1-motor starting 2-soft stopping 3-fault 4-braking, 5-motor running 6-programmable time delay 7- Not identified 8-under load protection(does not trip as a fault)	7
C15	K3 output delay	0~250S	0
C16	K2 output delay	0~250S	20
C17	Programmable operation timing	0---999.9h (valid when run is disconnected with com)	0
C18	Address for communication	1-32	1
C19	Baud rate	0- (600) 1- (1200) 2- (2400) 3- (4800) 4- (9600) 5- (19200)	4
C20	Time limit for starting	0~120S	80
C21--C22	Not identified	-----	--
C23	Freq value	0~1000 Unit 0.1HZ	--
C24	Freq detection	0~2 50/60HZ self-adaption 1 50HZ 2 60HZ	1

C25	Not identified	-----	--
C26	Password	0-----5535	----
C27	Current unbalanced time	0~10S	2
C28	Not identified	-----	--

5.5.6 Explanation of senior parameters

◆ Parameter for displaying and run\stop control C00—C02

Customer may choose the language for interface, and there are Chinese and English to select. Customer may scroll through the items that High Voltage Solid Soft Starter is monitoring by pressing button $\wedge \vee$ when it is in operation, includes rate current of motor I_e , average current I , phase current $L1$, phase current $L2$, phase current $L3$, % of analogue input, % of output voltage, countdown to start $t1$ and countdown to brake $t2$. Moreover, customer can fix an item to display by setting up parameter C01. Parameter C02 is used to select control mode of run\stop. Customer may run or stop High Voltage Solid Soft Starter remotely through corresponding terminals no matter which control mode is selected.

◆ Function selection for digital input terminal C03—C04

M2 parameter: High Voltage Solid Soft Starter provides a second set of primary parameters which can be selected by connecting terminal D1\D2 and COM. (When D1\D2 is set M2 parameter.) Disconnect D1\D2 and COM to select M1 primary parameter.

- **Fault reset:** High Voltage Solid Soft Starter will start motor again if a run command present when the fault is reset.
- **Jog:** Customer may jog the motor through panel (when parameter C02 is set panel jog enabled). Keep pressing button RUN to jog motor and release the button to stop. This function can be realized by connecting or dis-connecting the digital input terminal D1\D2. Connect it to jog and dis-connect it to stop.
- **Emergency input:** disconnect D1\D2 and COM to stop motor emergently when D1\D2 is set emergency input and LCD panel will display an emergency stop page.
- **Time delay relay input:** the corresponding programmable relay should be set programmable time delay output when D1 is set time delay relay input. The corresponding relay will put out a signal (when time delay of the relay is up) if D1 is connected.

Note: when macro control is selected, to connect or dis-connect the terminal is concerned with function of macro control. Please refer to function explanation of macro control.

◆ Analogue input\output selecting parameters C06—C07

Customer may choose the range and signal type of analogue input\output according to particular application.

◆ Macro control selecting parameters C08—C11

Customer may start or stop High Voltage Solid Soft Starter automatically by applying a macro (need to start the macro by button RUN on the panel). The following is explanation for parameter item C08.

- **Macro control disabled:** starting or stopping of High Voltage Solid Soft Starter is not related to macro but is related to setting of parameter item C02 and connection of control terminals.
- **RUN macro control:** start to run when time delay set by parameter C09 is up if the run command is valid. The time delay is only related to motor start but not to operation of macro.
- **Digital 1 input terminal macro control:** to run or stop High Voltage Solid Soft Starter (when run command is valid). In accordance with setting of parameter C03: if it set COM dis-connected macro control: High Voltage Solid Soft Starter starts when digital input terminal D1 is connected and time delay set by parameter C09 is up. High Voltage Solid Soft Starter stops and macro stop is displayed on panel if the terminal is dis-connected

during starting process. If it set COM connected macro control: High Voltage Solid Soft Starter starts when digital input terminal D1 is dis-connected and time delay set by parameter C09 is up. High Voltage Solid Soft Starter stop and macro stop is displayed on panel if the terminal is connected during starting process. Customer may dis-connect the terminal to start High Voltage Solid Soft Starter again.

- **Digital 2 input terminal macro control:** to run or stop High Voltage Solid Soft Starter (when run command is valid). In accordance with the set of parameter C04: if it set COM dis-connected macro control: High Voltage Solid Soft Starter starts when digital input terminal D2 is connected and time delay set by parameter C09 is up. High Voltage Solid Soft Starter stops and macro stop is displayed on panel if the terminal is dis-connected during starting process. If it set COM connected macro control: High Voltage Solid Soft Starter starts when digital input terminal D2 is dis-connected and time delay set by parameter C09 is up. High Voltage Solid Soft Starter stop and macro stop is displayed on panel if the terminal is connected during starting process. Customer may dis-connect the terminal to start High Voltage Solid Soft Starter again.
- **Analogue input macro control:** to run or stop the motor according to top limit and lower limit of the analogue input set by parameter C10 and C11. High Voltage Solid Soft Starter will stop the motor when the top limit is exceeded and will run the motor when the lower limit is outstrip (only when the run command is valid and time delay set by parameter C09 is up. Macro stop will display on panel if the macro condition is not fulfilled).

◆ **Parameter for relay output C12—C16**

There are three relays on the main board of High Voltage Solid Soft Starter and two of them are programmable. Customer may set them according to requirement and the rest is designed to control the bypass contactor.

Parameter C12, C13, C14, C15, C16: to set function of output and output delay.

Full voltage: contacts when output voltage reaches rate voltage (and time delay is up).

- **Starting:** soft starter is starting motor (and time delay is up). The signal will not put out if voltage increases to full before the time delay is up.
- **Soft stopping:** the signal put out when soft starter is ramping down (and time delay is up and it is less than the soft stopping time set by parameter item 1M07).
- **Fault:** put out the signal when a fault is detected by soft starter (and time delay is up).
- **Braking:** put out the signal when soft starter is braking (and time delay is up and it is less than the braking time set by parameter item 1M09).
- **Running:** put out the signal during motor starting and running (and time delay is up).
- **Programmable time delay:** parameter C03 must set time delay relay input which is regarded as a time delay relay.
- **Under load protection (does not trip as a fault) :** the signal is put out when under load is detected (and preset time delay is up) but is not treated as a fault.

◆ **Parameter for operation timing C17**

Minimum set value of this parameter is 0.1h if it is needed. The parameter means High Voltage Solid Soft Starter will stop motor within the time in preset mode after motor starts up. (valid when dual-node control mode is applied)

◆ **Parameters for communication and password lockout C18—C19、C26**

32 High Voltage Solid Soft Starter soft starters can be connected to the net when collective control is required and customer can read present address through LCD panel. Parameter item C26 is to set password to parameter modification so that the settings are lockout.

5.5.7 Parameters for displaying and recording

Parameter	Item	Range	Value
N00	Rate current of Soft Starter	Can not be modified	----

N01	Rectification to current measuring	Can not be modified	---
N02	Precision of displaying current	Can not be modified	---
N03	Total operations	Can not be modified	---
N04	Total operating time	Can not be modified	---
N05- N11	Parameter for manufacturer	Can not be modified	---
N12	Software versions	Can not be modified	---
N13	Parameter for manufacturer	Can not be modified	---
N14	Rectification to current output	Can not be modified	---
N15	Fault record No.	Can not be modified	---
N16-N30	Fault history	Can not be modified	---



Display and record parameters and record the operation and status information of soft starter .This function should not be modified.

Section 6 Maintenance and Troubleshooting

ASAMV PLUS series products are designed to be free of maintenance. Like other electric equipments, this equipment should be regularly checked for fear of dust pollution, damp and environmental pollution resulted from industrial production. Serious pollution may result in high voltage discharge and affect the heat dissipation of SCR's cooler.

6.1 Fault analysis

When a fault occurs, the corresponding fault information will be displayed on LCD touch screen. The motor should be restarted after the fault is cleared. If the fault still can not be cleared using correct operating method and program processing, please contact the manufacturer.

The soft starter has multiple protective functions. When the protective functions act, the soft starter will stop immediately and the current fault information will be displayed on LCD screen, touch screen and panel. User can analyze faults to fault information.

Fault code	Fault	Cause	Troubleshooting
01	Power Lose	Phase loss in starting or operation.	Check the reliability of three-phase power. Check if the three-phase input power supply voltage is out of phase Check if the three-phase output current is normal
02	Phase Reverse	Phase sequence reservedly connected.	Adjust phase sequence or set phase sequence free of check. Check if the incoming phase sequence is correct If phase sequence detection is not required, set parameter 1M18=0
03	None Fault	Set parameters lost	Check functions setting and reset
04	Over Load	Poor quality of power grid?	Check whether the power quality is found to range?
05	Overcurrent	Load suddenly becomes heavy. Load variation is too large.	Adjust load running state Adjust 1M13 Check if the soft-start output is short-circuited Determine whether the load suddenly increases and whether there is

			fluctuation Troubleshooting the machine
07	Current Imbalance	Phase loss or phase voltage is unbalanced	1 Check if the 1M12 parameter setting is correct. 2 Check if the main circuit current or voltage is balanced
08	SCR Overheat	Internal cooler is overheat The starter is not well ventilated.	Check the qualification of fan Lower start frequency Check if the control power voltage is too low. Check if the radiator is overheated or the overheat protection switch is disconnected
09	Inner Forbid	Violate operating instruction	Ensure operating instruction
10	Start Overtime	Overburdened and start time is too short. Current limiting amplitude is too small.	Adjust ramp time 1M04 Adjust current limiting amplitude Increase 1M05 Decrease 1M04
--	Over-voltage protection	Power voltage of major loop is higher than set value	Adjust over-voltage protection value Check if primary power voltage is too high.
--	Under-voltage protection	Power voltage of major loop is lower than set value	Adjust Under-voltage protection value Check if primary power voltage is too low.
--	Ground protection	Ground current is larger than allowed value	Check if there is ground current.
--	Frequent start protection	Frequent start	Reduce start frequency
13	Hot Overload	The duration of heavy current is too long. Overload operation or not.	Check if motor current is wrongly set. Overload or not.
14	SCR Abnorma	SCR works abnormally Output phase loss for soft starter	Check whether SCR is damaged. Check whether input or output of soft starter lacks phase.

6.3 Fault history

This starter can at most record the recent 15 faults information for users.

6.4 Troubleshooting

As fault has memory, after fault is cleared, you can reset fault through pressing button "STOP" for above 4 seconds, external fault clearance input terminal (D1 or D2 multifunction input) or cutting off AC220V control power to restore the starter to the state of ready to start.

6.5 Maintenance

The working field should be regularly cleaned to reduce dust in ambient environment. The low and high voltage bins of ASAMV PLUS series high voltage soft starter should be regularly cleaned. It is necessary to use a brush or blower to remove dust inside bin (period less than 20 days)

It is also important to clean thyristor valve block. A blower with big power can be used to clean the valve block by blowing from up to down. Clean the field after blowing the thyristor valve block (period less than 6 months)

To ensure the normal operation, ASAMV PLUS series high voltage soft starter should be regularly dehumidified if the working field is wet. (Period is depended on the circumstance)

Considering that there is shake in working field when the soft starter is started, the secondary control wiring of ASAMV PLUS series high voltage soft starter should be regularly checked to examine whether the connecting terminal is loose. If yes, tighten the loose connecting terminal. (3 months as a period)

Section 7 Communication description

ASAMV PLUS series motor soft starter is provided with RS485 interface port for communication and adopts the standard Modbus protocol for communication between central devices and subsidiary devices. Customer may realize collective controlling by PC/PLC and upper computer to meet particular application.

7.1 Contains of the protocol

The Modbus serial communication protocol identified contents of frame, which is asynchronous transmitted, and format of feedback frame from subsidiary devices. Frame contents of central device includes: addresses of subsidiary devices, command, data and error checking etc. Feedback of subsidiary devices is in the same structure. It includes: acknowledge of running, feedback data and error checking etc. The subsidiary device will organize a fault frame to central device as a feedback if error occurs or it can not execute the movement that central device required during frame receiving.

7.2 Structure of bus

(1) Interface port

RS485 communication port of hardware

(2) Mode of transmission

It is half-duplex asynchronous serial transmission. Communication between central devices and subsidiary devices is one-way transmission. Data is transmitted in the form of message and is sent frame by frame during the serial asynchronous communication.

(3) Structure of topology

It is a system formed by a central device and several subsidiary devices. Address of subsidiary devices is from 1 to 32 and the address for each subsidiary device is unique. This forms the foundation of ModBus serial communication.

7.3 Description of protocol

Communication protocol of ASAMV PLUS is serial asynchronous master-slave communication protocol. Only master device is suppose to set up the protocol and all slave devices response to “inquire and command” sent from master device by providing data or react according to “inquire and command”. Mater device here refers to personal computer (PC), industrial control devices or programmable logic controller etc. While for slave devices refers to ASAMV PLUS soft starter or other control devices with same communication protocol.

7.4 Frame structure

Format of communication data of ASAMV PLUS soft starter's ModBus protocol is RTU (remote terminal unit). The following is format of each bite in RTU:

Code system: 8-bit binary

Hexadecimal 0—9、A—F,

Each 8-bit frame field includes two hexadecimal characters.

New transmission always starts with a silence period of 3.5 bits' transmitting time under this mode. A silence interval of 3.5 bits' transmitting time on the net, whose transmission speed is calculated in baud rate, can be

recognized easily. The silence period is followed by fields of slave device address, controlling command, data and CRC check character. Each field is transmitted hexadecimal 0...9, A...F. The net device monitors activity of Modbus continuously even in silence interval. Every net device acknowledges the character when the first field (address information) is received. When the last character is transmitted there comes another silence period of 3.5 bits' transmitting time as the end of first frame. The transmission of a new frame will start after the silence period. Information of a frame must be transmitted as a continuous data stream. Receiving device will delete the interrupted information if there is any interval longer than 1.5 bits before an entire frame is transmitted.

7.5 State control word

State control word represents the state of soft starter and is represented by one character.

Position	Value	Description
0	1	Motor starts up
1	1	Motor is starting
2	1	Motor is (soft) stopping
3	1	Jog
4	0	M1 parameter
	1	M2 parameter
5	1	Run prohibit (emergency stop)
6	1	Fault
7	0	Stop
	1	Modifying
8	xxxx	Displayed item which is metering during running/modifying
9		
10		
11		
12	1	Brake during running time relay control
13	0	Without decimal point
	1	With decimal point
14	1	Panel control enabled
15	0	Jog enabled
	1	Run via panel

7.6 Address for communication

Primary parameters 1

Designation	Type	No. of register	Type of data	R/W character
Ramp mode of start	I/O	0001	Uint	R/W
Voltage for kick start	I/O	0002	Uint	R/W
Duration of kick start	I/O	0003	Uint	R/W
Initial voltage\current	I/O	0004	Uint	R/W
Ramp time	I/O	0005	Uint	R/W
Current limit	I/O	0006	Uint	R/W
Second run permit	I/O	0007	Uint	R/W
Ramp down time	I/O	0008	Uint	R/W
Ramp down voltage	I/O	0009	Uint	R/W
Braking time	I/O	0010	Uint	R/W
Rate current of motor	I/O	0011	Uint	R/W

	Grade of over load protection	I/O	0012	Uint	R/W
	Phase current unbalance	I/O	0013	Uint	R/W
	Over current protection for running	I/O	0014	Uint	R/W
	Grade of under load protection	I/O	0015	Uint	R/W
	Trip time for under load	I/O	0016	Uint	R/W
	Load current time	I/O	0017	Uint	R/W
	Not identified	I/O	0018	Uint	R/W
	Phase sequence detecting	I/O	0019	Uint	R/W

Primary parameters 2

Designation		Type	No. of register	Type of data	R/W character
	Ramp mode of start	I/O	0021	Uint	R/W
	Voltage for kick start	I/O	0022	Uint	R/W
	Duration of kick start	I/O	0023	Uint	R/W
	Initial voltage\current	I/O	0024	Uint	R/W
	Ramp time	I/O	0025	Uint	R/W
	Current limit	I/O	0026	Uint	R/W
	Second run permit	I/O	0027	Uint	R/W
	Ramp down time	I/O	0028	Uint	R/W
	Ramp down voltage	I/O	0029	Uint	R/W
	Braking time	I/O	0030	Uint	R/W
	Rate current of motor	I/O	0031	Uint	R/W
	Grade of over load protection	I/O	0032	Uint	R/W
	Phase current unbalance	I/O	0033	Uint	R/W
	Over current protection for running	I/O	0034	Uint	R/W
	Grade of under load protection	I/O	0035	Uint	R/W
	Trip time for under load	I/O	0036	Uint	R/W
	Load current time	I/O	0037	Uint	R/W
	Not identified	I/O	0038	Uint	R/W
	Phase sequence detecting	I/O	0039	Uint	R/W

Senior parameters

Designation		Type	No. of register	Type of data	R/W character
	Language	I/O	0041	Uint	R/W
	Item to display	I/O	0042	Uint	R/W
	Control mode of run/stop	I/O	0043	Uint	R/W
	Function of digital input terminal D1	I/O	0044	Uint	R/W
	Function of digital input terminal D2	I/O	0045	Uint	R/W
	Not identified	I/O	0046	Uint	R/W
	Analogue input/output	I/O	0047	Uint	R/W
	Signal of analogue output	I/O	0048	Uint	R/W

User's Manual for ASAMV PLUS High Voltage Solid Soft Starter

	Macro control selecting	I/O	0049	Uint	R/W
	Macro control delay	I/O	0050	Uint	R/W
	Top limit of analogue input	I/O	0051	Uint	R/W
	Lower limit of analogue input	I/O	0052	Uint	R/W
	Output of relay K1	I/O	0053	Uint	R/W
	Output delay of Relay K1	I/O	0054	Uint	R/W
	Output of relay K3	I/O	0055	Uint	R/W
	Output delay of Relay K3	I/O	0056	Uint	R/W
	Output delay of Relay K2	I/O	0057	Uint	R/W
	Programmable running time	I/O	0058	Uint	R/W
	Address of communication	I/O	0059	Uint	R/W
	Baud rate	I/O	0060	Uint	R/W
	Time limit for starting	I/O	0061	Uint	R/W
	Not identified	I/O	0062	Uint	R/W
	Not identified	I/O	0063	Uint	R/W
	Freq value	I/O	0064	Uint	R/W
	Freq detection	I/O	0065	Uint	R/W
	Not identified	I/O	0066	Uint	R/W
	Password	I/O	0067	Uint	R/W
	Current unbalanced time	I/O	0068	Uint	R/W
	Not identified	I/O	0069	Uint	R/W

Item to display

Designation		Type	No. of register	Type of data	R/W character
	Rate current of soft starter	I/O	0071	Uint	R
	Rectification to current measuring	I/O	0072	Uint	R
	Precision of displaying current	I/O	0073	Uint	R
	Total operations	I/O	0074	Uint	R
	Total operating time	I/O	0075	Uint	R
	Parameter for manufacturer	I/O	0076	Uint	R
	Parameter for manufacturer	I/O	0077	Uint	R
	Parameter for manufacturer	I/O	0078	Uint	R
	Parameter for manufacturer	I/O	0079	Uint	R
	Parameter for manufacturer	I/O	0080	Uint	R
	Parameter for manufacturer	I/O	0081	Uint	R
	Parameter for manufacturer	I/O	0082	Uint	R
	Software versions	I/O	0083	Uint	R
	Parameter for manufacturer	I/O	0084	Uint	R
	Rectification to current output	I/O	0085	Uint	R
	Fault records	I/O	0086	Uint	R
	Fault record No. 1	I/O	0087	Uint	R
	Fault record No. 2	I/O	0088	Uint	R
	Fault record No. 3	I/O	0089	Uint	R

	Fault record No. 4	I/O	0090	Uint	R
	Fault record No. 5	I/O	0091	Uint	R
	Fault record No. 6	I/O	0092	Uint	R
	Fault record No. 7	I/O	0093	Uint	R
	Fault record No. 8	I/O	0094	Uint	R
	Fault record No. 9	I/O	0095	Uint	R
	Fault record No. 10	I/O	0096	Uint	R
	Fault record No. 11	I/O	0097	Uint	R
	Fault record No. 12	I/O	0098	Uint	R
	Fault record No. 13	I/O	0099	Uint	R
	Fault record No. 14	I/O	0100	Uint	R
	Fault record No. 15	I/O	0101	Uint	R

Real-time metering


Designation		Type	No. of register	Type of data	R/W character
	Operating state of main control board	I/O	0110	Uint	R
	Latest err 1	I/O	0111	Uint	R
	Latest err 2	I/O	0112	Uint	R
	Latest err 3	I/O	0113	Uint	R
	Ie—rate current of motor	I/O	0114	Uint	R
	I—average current	I/O	0115	Uint	R
	L1 phase current	I/O	0116	Uint	R
	L2 phase current	I/O	0117	Uint	R
	L3 phase current	I/O	0118	Uint	R
	% of analogue input	I/O	0119	Uint	R
	% of output voltage	I/O	0120	Uint	R
	Start countdown	I/O	0121	Uint	R
	Brake countdown	I/O	0122	Uint	R

Command of controlling

Designation		Type	No. of register	Type of data	R/W character
	To stop	I/O	0130	0x0081	W
	To run	I/O	0132	0x0083	W
	To reset	I/O	0133	0x0084	W

7.7 Notice

- (1) When there are more than two devices in the net, the address of each ASAMV PLUS should be unique, namely any two ASAMV PLUS soft starters can not possess the same address (set through parameter C18).
- (2) Baud rate of ASAMV PLUS soft starter should be in accordance with that of controller (set through parameter C19).
- (3) A resistor of 120 Ω should be connected to both communication wires A and B of the last ASAMV PLUS when there is more than one ASAMV PLUS soft starter in a net.

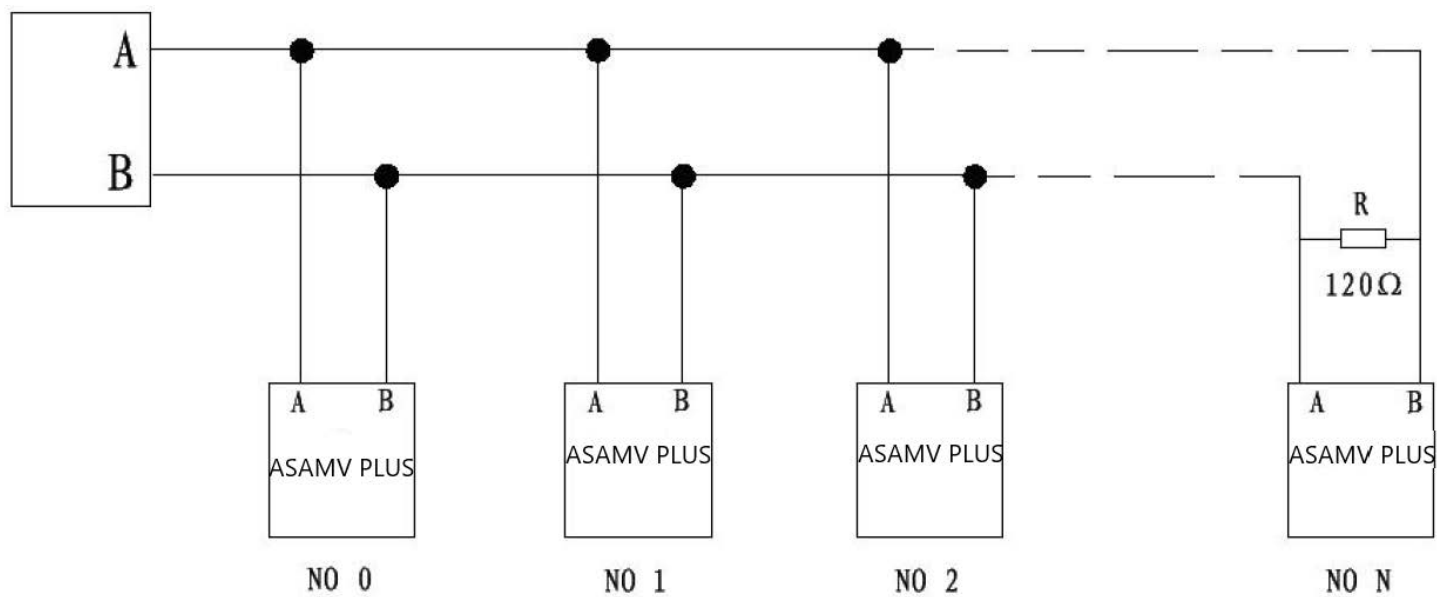



Section 8 Additional Information


8.1 Order information

Following information is required to be provided in the order:

- ◆ **Upper power condition**
- ◆ **Motor model, rated voltage, rated current, rated power and rated speed**
- ◆ **Motor drive load types (wind machine, water pump, etc.)**
- ◆ **Equipment incoming/outgoing cables**
- ◆ **Operating environment**
- ◆ **For other requirements, please contact us.**

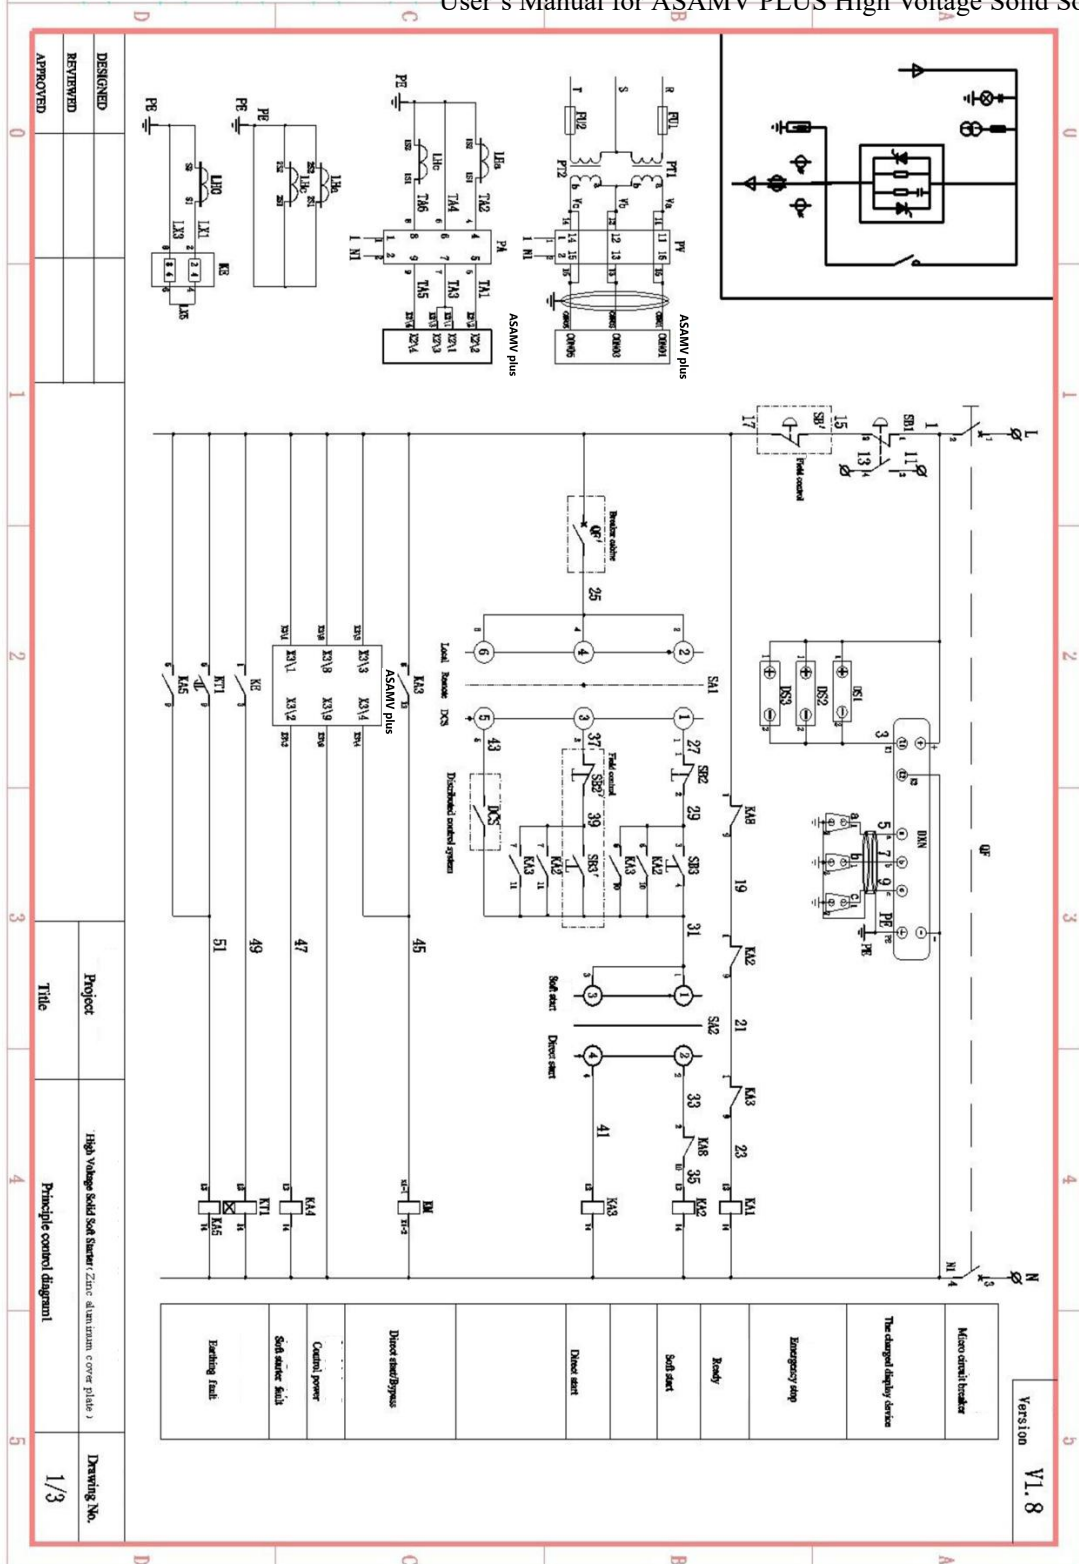

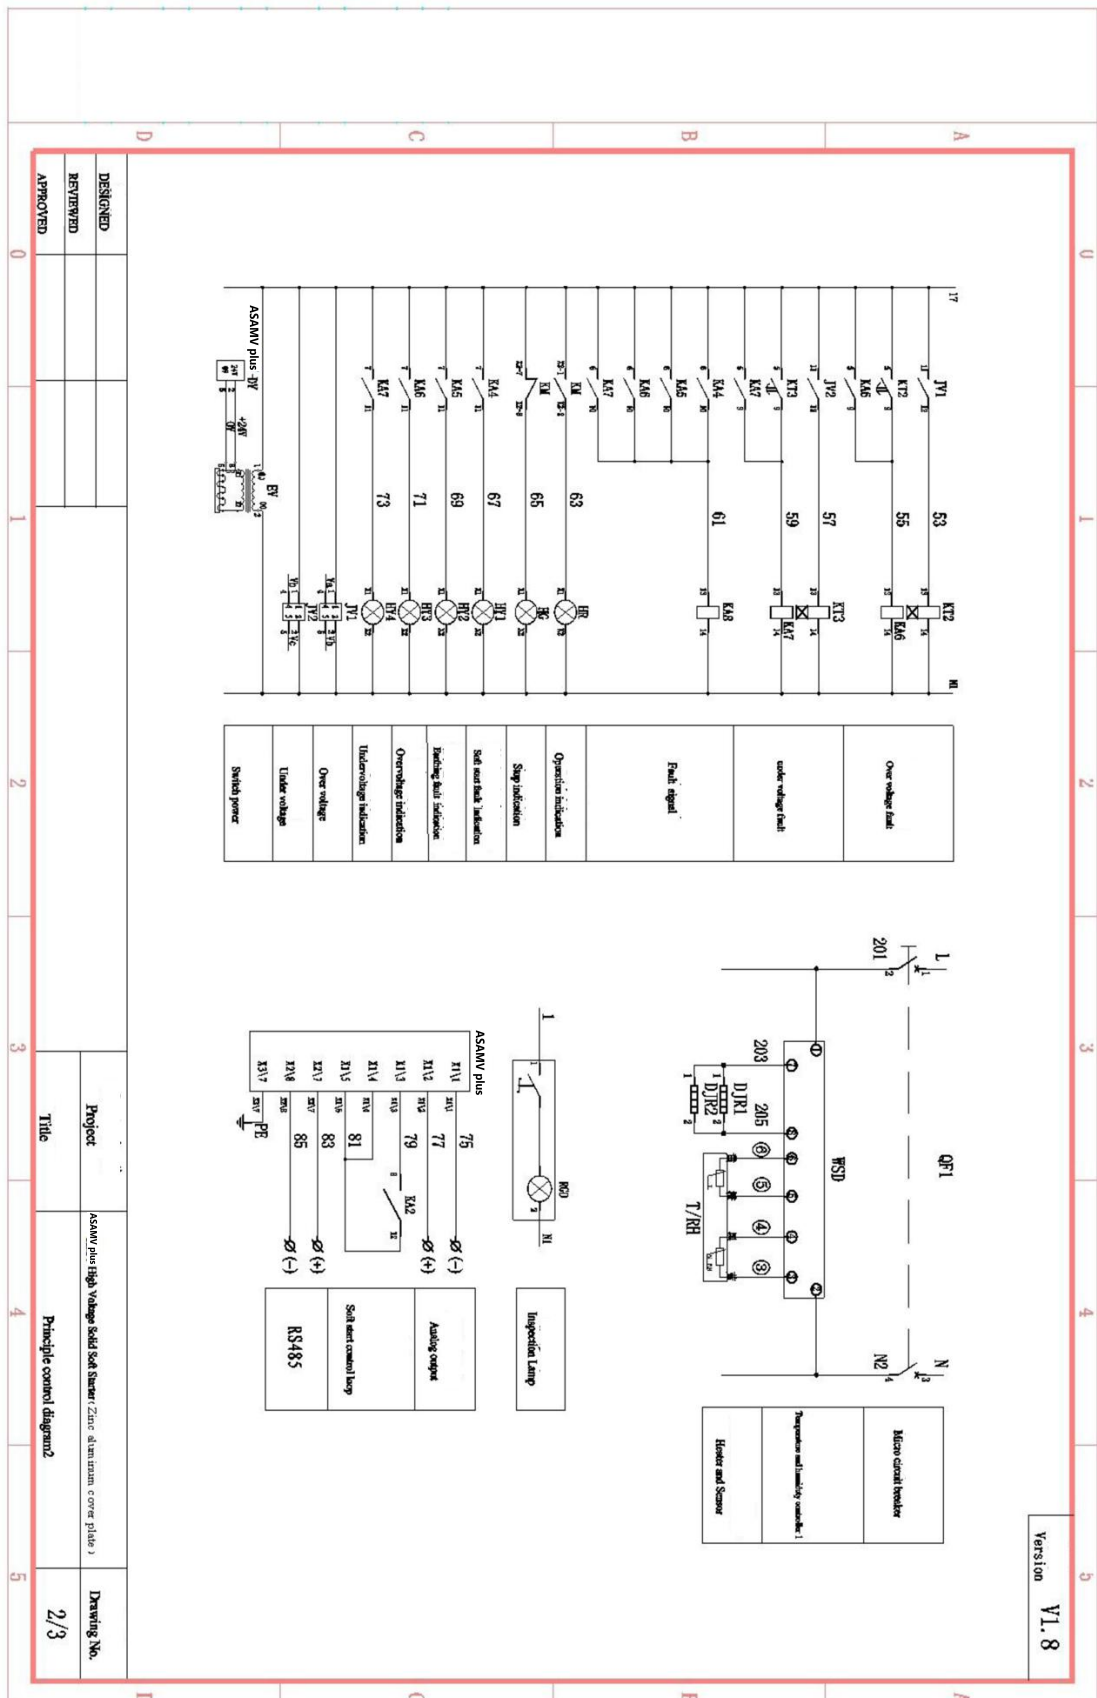

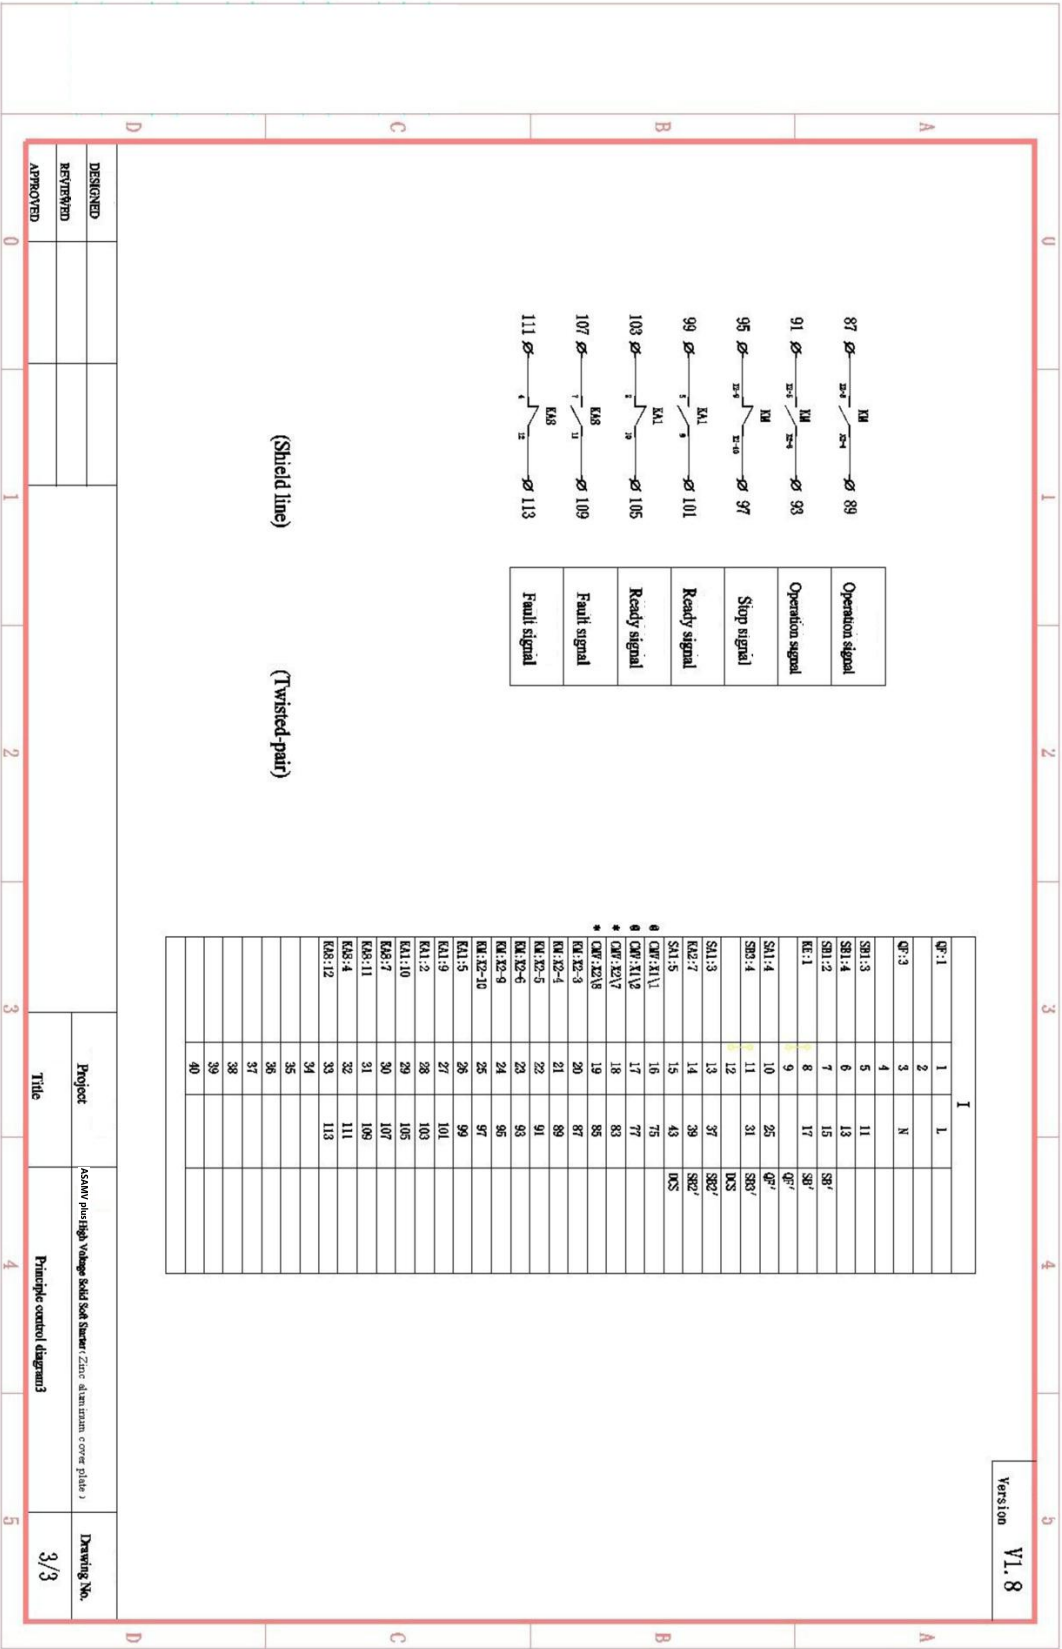

● The company keeps the right for product design and change, which are subject to change

without prior notice.

- There maybe difference between pictures in this manual and physical object, and physical object shall prevail.
- The final power of interpretation belongs to Saman Gostar Taba